

**Main page:** [Cisco Unity Express -- REST PI Service Operations](#)

**Previous page:** [Cisco Unity Express -- Public Distribution Lists REST PI Service Operation](#)

**Search the Cisco Unity Express documentation on the DocWiki:**

Loading

---

## Contents


- [1 Voicemail Settings](#)
  - ◆ [1.1 Classes](#)
    - ◇ [1.1.1 LiveReplyCallingNumberRule](#)
    - ◇ [1.1.2 LiveReplyNetworkPrecedence](#)
    - ◇ [1.1.3 MailboxSelection](#)
    - ◇ [1.1.4 VmSettings](#)
  - ◆ [1.2 Resources](#)

## Voicemail Settings

Classes

**Figure 29: Voicemail Settings**

## Cisco\_Unity\_Express\_-\_Voicemail\_Settings\_REST\_Pi\_Service\_Operation

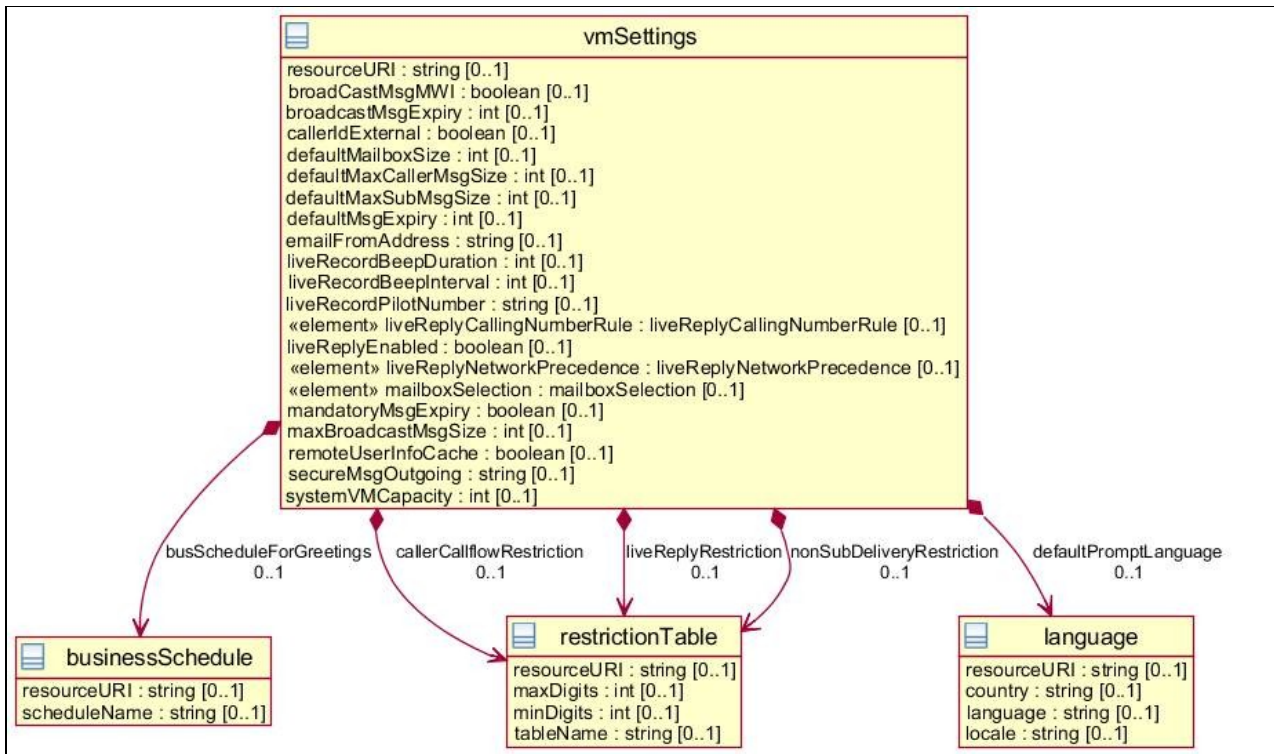

### LiveReplyCallingNumberRule

<b>Class Name</b>	LiveReplyCallingNumberRule (Enumeration Class)
<b>Extends From</b>	
<b>Description</b>	Enumeration of live reply calling number rules
<b>XML Namespace</b>	http://vmsettings.model.rest.voicemail.aesop.cisco.com
<b>Enum Values</b>	<p><b>EXTENSION</b> (Use extension in network voicemail header for live reply)</p> <p><b>PREFIX_EXTENSION</b> (Use network location prefix then extension in network voicemail header for live reply)</p> <p><b>LOCATION_EXTENSION</b> (Use network location id then extension in network voicemail header for live reply)</p> <p><b>LOCATION_PREFIX_EXTENSION</b> (Combine network location id, prefix, and voicemail extension for live reply)</p> <p><b>PREFIX_LOCATION_EXTENSION</b> (Combine network location prefix, id, and voicemail extension for live reply)</p>

### LiveReplyNetworkPrecedence

<b>Class Name</b>	LiveReplyNetworkPrecedence (Enumeration Class)
<b>Extends From</b>	
<b>Description</b>	Enumeration of live reply network precedence rules
<b>XML Namespace</b>	http://vmsettings.model.rest.voicemail.aesop.cisco.com

## Cisco\_Unity\_Express\_--\_Voicemail\_Settings\_REST\_PI\_Service\_Operation

<b>Enum Values</b>	<b>DISABLED</b> (Turn off live reply to network delivered voicemail messages)
	<b>CALLING_NUMBER</b> (Use the calling number rule to determine live reply number for a network delivered voicemail)
	<b>E164_NUMBER</b> (Use the E.164 number in the voicemail header when using live reply for a network delivered voicemail)
	<b>E164_CALLING_NUMBER</b> (Use the E.164 number in the voicemail header if available otherwise use the calling number rule for live reply)

### MailboxSelection

<b>Class Name</b>	MailboxSelection (Enumeration Class)
<b>Extends From</b>	
<b>Description</b>	Mailbox selection rules enumeration
<b>XML Namespace</b>	http://vmsettings.model.rest.voicemail.aesop.cisco.com
<b>Enum Values</b>	LAST_REDIRECT ORIGINAL_CALLED

### VmSettings

<b>Class Name</b>	VmSettings		
<b>Extends From</b>	ManagedBaseElement		
<b>Description</b>	Class representing various system level voicemail related configurations.		
<b>XML Namespace</b>	http://vmsettings.model.rest.voicemail.aesop.cisco.com		
<b>Field Name</b>	<b>Type</b>	<b>Constraints</b>	<b>Comments</b>
broadCastMsgMWI	Boolean		Use MWI for broadcast messages
broadcastMsgExpiry	Integer		Broadcast message expiry time, in days
busScheduleForGreetings	BusinessSchedule		Business Hours Schedule for Greetings
callerCallflowRestriction	RestrictionTable		Restriction table to use to control caller callflow
callerIdExternal	Boolean		Play caller ID for external callers
defaultMailboxSize	Integer		Default mailbox size, in seconds
defaultMaxCallerMsgSize	Integer		Maximum

Cisco\_Unity\_Express\_--\_Voicemail\_Settings\_REST\_Pi\_Service\_Operation

			caller message size, in seconds
defaultMaxSubMsgSize	Integer		Maximum subscriber recording size, in seconds
defaultMsgExpiry	Integer		Message expiry time, in days
defaultPromptLanguage	Language		Default prompt language
emailFromAddress	String		Outgoing e-mail "from" address
liveRecordBeepDuration	Integer	Range 50-1000 milliseconds	Live record beep duration, in milliseconds
liveRecordBeepInterval	Integer	Range 1-30 seconds	Live Record Beep Interval, in seconds
liveRecordPilotNumber	String		Live Record pilot number
liveReplyCallingNumberRule	LiveReplyCallingNumberRule		Live reply calling number rule
liveReplyEnabled	Boolean		Enable live reply
liveReplyNetworkPrecedence	LiveReplyNetworkPrecedence		Live reply network precedence
liveReplyRestriction	RestrictionTable		Restriction table to use for live reply
mailboxSelection	MailboxSelection		Mailbox where message is stored when a call is redirected
mandatoryMsgExpiry	Boolean		Forces user to delete message upon expiry
maxBroadcastMsgSize	Integer		Maximum broadcast message size, in seconds
nonSubDeliveryRestriction	RestrictionTable		Restriction table to use for Non-subscriber delivery
remoteUserInfoCache	Boolean		

Cisco\_Unity\_Express\_--\_Voicemail\_Settings\_REST\_API\_Service\_Operation

			Enables caching of vCard and spoken name information from remote voicemail users
secureMsgOutgoing	String	Possible values are ?never?, ?ask?, ?always?, ?private?	Global configuration for secure messaging for outgoing messages
systemVMCapacity	Integer		Maximum voice message store, in minutes

**Resources**

Resource URI	Operation	Input	Return Value
/voicemail/vmsettings	GET (read voicemail settings)		VMSettings
	PUT (update voicemail settings)	VMSettings	