

## Exec Command Differences

The following table lists the **debug** commands that are in FWSM software but not in ASA software.

<b>[show   no] debug acl optimization</b>
<b>[show   no] debug aging</b>
<b>[show   no] debug control-plane</b>
<b>[show   no] debug ip bgp</b>
<b>[show   no] debug npc</b>
<b>[show   no] debug pc-lu</b>
<b>[show   no] debug pisa</b>
<b>[show   no] debug resource partition</b>
<b>[show   no] debug route-inject</b>
<b>[show   no] debug route-monitor</b>
<b>[show   no] debug route-np</b>
<b>[show   no] debug RM-NP-counter</b>
<b>[show   no] debug session</b>
<b>[show   no] debug ssl</b>