

Exec and Unsaved Config Command Differences

The following table lists the Exec and configuration commands (not saved in the startup config) that are in FWSM software but not in ASA software.

access-list commit
access-list mode
[no] failover suspend-config-sync
[no] np [add del acl-notify] keywords
[no] np {[1 2 3 all]} keywords
[no] npc keywords
upgrade-mp