

## FACT\_show\_counters\_threshold

To display the monitored port counters, use the **show counters threshold** command.

**show counters threshold** [chassis | chips | ports] [error]

### Syntax Description

chassis	(Optional) Displays only the counters for the ports in the specified chassis.
chips	(Optional) Displays only the counters for the ports in the specified chips.
ports	(Optional) Displays only the counters for the specified ports.
error	(Optional) Displays only those counters that are both error counters and non-zero counters. Some counters, such as xmit-pkts, count non-error events. These counters are not shown.

### Command Default

No default behavior or values.

### Usage Guidelines

If the current scan does not include threshold port counters, then this command fails.

### Examples

The following is sample output from the **show counters threshold** command, and it shows all counters in the subnet that have exceeded their error thresholds:

```
fact> show counters threshold
```

```
port                counter                value  
-----
```

## FACT\_show\_counters\_threshold

```
port: switchB/1/3          symbol_errors          65535
ngbr: switchA/1/3
-----
port: switchB/1/6          symbol_errors          65535
ngbr:
-----
```

### **Related Commands**

**reset port-counters**

**scan fabric**

**scan fabric all**

**show counters monitored**

**show counters raw**