

## FACT\_show\_versions

To show the version of the firmware on each managed node, use the **show versions** command.

**show versions** [*managed-nodes*]

### Syntax Description

<i>managed-nodes</i>	(Optional) Displays only the versions of the specified managed nodes.
----------------------	---

### Command Default

No default behavior or values.

### Usage Guidelines

Unlike most commands, the **show versions** command works on the current scan if the scan is not complete. The **show versions** command displays different version information depending upon your system hardware and software:

- For hosts running the Cisco IB stack, the version displayed is the version of the installed ib-mod RPM.
- For hosts running the OFED stack, the version displayed is the version reported by ofed\_info, which would be the OFED driver release.
- For SFS OS switches, the version displayed is the system version reported by the **show versions** command.
- For OEM switches, the version displayed is the version reported by the **fwVersion** command.

### Examples

The following example shows the versions of all managed nodes in the subnet:

```
fact> show versions
```

```
name                version
-----
host01              Cisco rhel4-2.6.9-42.ELsmp-3.2.0-148
switchA            Topspin-90 SFS OS 2.10.0-ALPHA releng #613 11/05/2007 21:36:18
```

## FACT\_show\_versions

switchB

SFS-7000D SFS OS 2.11.0-ALPHA releng #91 03/02/2008 00:07:09

### **Related Commands**

**install**