

This chapter describes how to configure VPN Routing and Forwarding Lite (VRF Lite) for the ML-Series cards. For additional information about the Cisco IOS commands used in this chapter, refer to the *Cisco IOS Command Reference* publication. This chapter contains the following major sections:

- [Understanding VRF Lite](#)
- [Configuring VRF Lite](#)
- [VRF Lite Configuration Example](#)
- [Monitoring and Verifying VRF Lite](#)

Note: If you have already configured bridging, you may now proceed with configuring VRF Lite as an optional step.

Contents

- [1 Understanding VRF Lite](#)
- [2 Configuring VRF Lite](#)
 - ◆ [2.1 Example 13-1: Configuring a VRF](#)
- [3 VRF Lite Configuration Example](#)
 - ◆ [3.1 Figure 13-1: VRF Lite-Sample Network Scenario](#)
 - ◆ [3.2 Example 13-2: Router A Configuration](#)
 - ◆ [3.3 Example 13-3: Router B Configuration](#)
 - ◆ [3.4 Example 13-4: Router A Global Routing Table](#)
 - ◆ [3.5 Example 13-5: Router A customer a VRF Routing Table](#)
 - ◆ [3.6 Example 13-6: Router A customer b VRF Routing Table](#)
 - ◆ [3.7 Example 13-7: Router B Global Routing Table](#)
 - ◆ [3.8 Example 13-8: Router B customer a VRF Routing Table](#)
 - ◆ [3.9 Example 13-9: Router B customer b VRF Routing Table](#)
- [4 Monitoring and Verifying VRF Lite](#)
 - ◆ [4.1 Table 13-1: Commands for Monitoring and Verifying VRF Lite](#)

Understanding VRF Lite

VRF is an extension of IP routing that provides multiple routing instances. It provides a separate IP routing and forwarding table to each VPN and is used in concert with MP-iBGP (Multi-Protocol internal BGP) between provider equipment (PE) routers to provide Layer 3 MPLS-VPN. However, ML-Series VRF implementation is without MP-iBGP. With VRF Lite, the ML Series is considered a PE-extension or a customer equipment (CE)-extension. VRF Lite is considered a PE-extension since it has VRF (but without MP-iBGP), and it is considered a CE-extension since this CE can have multiple VRFs and serves many customer with one CE box.

Under VRF Lite, an ML-Series CE can have multiple interfaces/subinterfaces with PE for different customers (while a normal CE is only for one customer). It holds VRFs (routing information) locally and it does not distribute the VRFs to its connected PE. It uses VRF information to direct traffic to the correct interfaces/subinterfaces when it receives traffic from customers' routers or from Internet service provider (ISP) PE router(s).

Configuring VRF Lite

Perform the following procedure to configure VRF Lite:

| Step | Command | Purpose |
|------|---|---|
| 1 | Router(config)# ip vrf <i>vrf-name</i> | Enters VRF configuration mode and assigns a VRF name. |
| 2 | Router(config-vrf)# rd <i>route-distinguisher</i> | <p>Creates a VPN route distinguisher (RD). An RD creates routing and forwarding tables and specifies the default route distinguisher for a VPN. The RD is added to the beginning of the customer's IPv4 prefixes to change them into globally unique VPN-IPv4 prefixes.</p> <p>Either RD is an ASN-relative RD, in which case it is composed of an autonomous system number and an arbitrary number, or it is an IP-address-relative RD, in which case it is composed of an IP address and an arbitrary number.</p> <p>You can enter a <i>route-distinguisher</i> in either of these formats:</p> <p>16-bit AS number: your 32-bit number For example, 101:3.</p> <p>32-bit IP address: your 16-bit number For example, 192.168.122.15:1.</p> |
| 3 | Router(config-vrf)# route-target {import export both} route-distinguisher | Creates a list of import and/or export route target communities for the specified VRF. |
| 4 | Router(config-vrf)# import map <i>route-map</i> | (Optional) Associates the specified route map with the VRF. |
| 5 | Router(config-vrf)# exit | Exits the current configuration mode and enters global configuration mode. |
| 6 | Router(config)# interface type number | Specifies an interface and enters interface configuration mode. |
| 7 | Router(config-vrf)# ip vrf forwarding <i>vrf-name</i> | Associates a VRF with an interface or subinterface. |
| 8 | Router(config-if)# end | Exits to privileged EXEC mode. |
| 9 | Router# copy running-config startup-config | (Optional) Saves configuration changes to NVRAM. |

Example 13-1 shows an example of configuring a VRF. In the example, the VRF name is *customer_a*, the route-distinguisher is 1:1, and the interface type is Fast Ethernet, number 0.1.


Example 13-1: Configuring a VRF

```
Router(config)# ip vrf customer_a
Router(config-vrf)# rd 1:1
Router(config-vrf)# route-target both 1:1
Router(config)# interface fastEthernet 0.1
Router(config-subif)# ip vrf forwarding customer_a
```

VRF Lite Configuration Example

Figure 13-1 shows an example of a VRF Lite configuration. The configurations for Router A and Router B are provided in Example 13-2 and Example 13-3, respectively. The associated routing tables are shown in Example 13-4 through Example 13-9.

Figure 13-1: VRF Lite-Sample Network Scenario

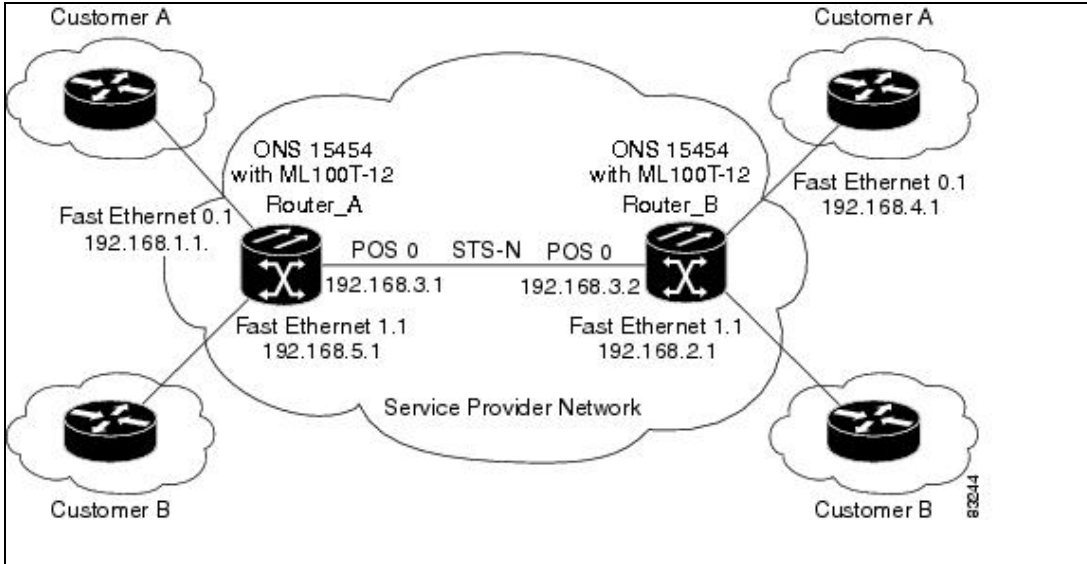

Example 13-2: Router A Configuration

```
hostname Router_A
!
ip vrf customer_a
 rd 1:1
  route-target export 1:1
  route-target import 1:1
!
ip vrf customer_b
 rd 2:2
  route-target export 2:2
  route-target import 2:2
!
bridge 1 protocol ieee
bridge 2 protocol ieee
bridge 3 protocol ieee
!
!
interface FastEthernet0
 no ip address
!
interface FastEthernet0.1
 encapsulation dot1Q 2
 ip vrf forwarding customer_a
 ip address 192.168.1.1 255.255.255.0
 bridge-group 2
!
interface FastEthernet1
 no ip address
!
interface FastEthernet1.1
 encapsulation dot1Q 3
```

ONS_15454_and_ONS_15454_SDH_Ethernet_Configuration_Guide_R8.5.1_--_Configuring_VRF_Lite

```
ip vrf forwarding customer_b
ip address 192.168.2.1 255.255.255.0
bridge-group 3
!
interface POS0
no ip address
crc 32
no cdp enable
pos flag c2 1
!
interface POS0.1
encapsulation dot1Q 1 native
ip address 192.168.50.1 255.255.255.0
bridge-group 1
!
interface POS0.2
encapsulation dot1Q 2
ip vrf forwarding customer_a
ip address 192.168.100.1 255.255.255.0
bridge-group 2
!
interface POS0.3
encapsulation dot1Q 3
ip vrf forwarding customer_b
ip address 192.168.200.1 255.255.255.0
bridge-group 3
!
router ospf 1
log-adjacency-changes
network 192.168.50.0 0.0.0.255 area 0
!
router ospf 2 vrf customer_a
log-adjacency-changes
network 192.168.1.0 0.0.0.255 area 0
network 192.168.100.0 0.0.0.255 area 0
!
router ospf 3 vrf customer_b
log-adjacency-changes
network 192.168.2.0 0.0.0.255 area 0
network 192.168.200.0 0.0.0.255 area 0
!
```

Example 13-3: Router_B Configuration

```
hostname Router_B
!
ip vrf customer_a
rd 1:1
route-target export 1:1
route-target import 1:1
!
ip vrf customer_b
rd 2:2
route-target export 2:2
route-target import 2:2
!
bridge 1 protocol ieee
bridge 2 protocol ieee
bridge 3 protocol ieee
!
!
interface FastEthernet0
```

Example 13-2: Router A Configuration

```

no ip address
!
interface FastEthernet0.1
 encapsulation dot1Q 2
 ip vrf forwarding customer_a
 ip address 192.168.4.1 255.255.255.0
 bridge-group 2
!
interface FastEthernet1
no ip address
!
interface FastEthernet1.1
 encapsulation dot1Q 3
 ip vrf forwarding customer_b
 ip address 192.168.5.1 255.255.255.0
 bridge-group 3
!
interface POS0
no ip address
 crc 32
no cdp enable
 pos flag c2 1
!
interface POS0.1
 encapsulation dot1Q 1 native
 ip address 192.168.50.2 255.255.255.0
 bridge-group 1
!
interface POS0.2
 encapsulation dot1Q 2
 ip vrf forwarding customer_a
 ip address 192.168.100.2 255.255.255.0
 bridge-group 2
!
interface POS0.3
 encapsulation dot1Q 3
 ip vrf forwarding customer_b
 ip address 192.168.200.2 255.255.255.0
 bridge-group 3
!
router ospf 1
 log-adjacency-changes
 network 192.168.50.0 0.0.0.255 area 0
!
router ospf 2 vrf customer_a
 log-adjacency-changes
 network 192.168.4.0 0.0.0.255 area 0
 network 192.168.100.0 0.0.0.255 area 0
!
router ospf 3 vrf customer_b
 log-adjacency-changes
 network 192.168.5.0 0.0.0.255 area 0
 network 192.168.200.0 0.0.0.255 area 0
!

```

Example 13-4: Router_A Global Routing Table

```

Router_A# sh ip route
Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area

```

Example 13-3: Router_B Configuration

ONS_15454_and_ONS_15454_SDH_Ethernet_Configuration_Guide_R8.5.1_--_Configuring_VRF_Lite

* - candidate default, U - per-user static route, o - ODR
P - periodic downloaded static route

Gateway of last resort is not set

C 192.168.50.0/24 is directly connected, POS0.1

Example 13-5: Router_A customer_a VRF Routing Table

Router_A# show ip route vrf customer_a

Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default, U - per-user static route, o - ODR
P - periodic downloaded static route

Gateway of last resort is not set

O 192.168.4.0/24 [110/2] via 192.168.100.2, 00:15:35, POS0.2
C 192.168.1.0/24 is directly connected, FastEthernet0.1
C 192.168.100.0/24 is directly connected, POS0.2

Example 13-6: Router_A customer_b VRF Routing Table

Router_A customer_b VRF Routing Table

Router_A# show ip route vrf customer_b

Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default, U - per-user static route, o - ODR
P - periodic downloaded static route

Gateway of last resort is not set

C 192.168.200.0/24 is directly connected, POS0.3
O 192.168.5.0/24 [110/2] via 192.168.200.2, 00:10:32, POS0.3
C 192.168.2.0/24 is directly connected, FastEthernet1.1

Example 13-7: Router_B Global Routing Table

Router_B# sh ip route

Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default, U - per-user static route, o - ODR
P - periodic downloaded static route

Gateway of last resort is not set

C 192.168.50.0/24 is directly connected, POS0.1

Example 13-4: Router_A Global Routing Table

Example 13-8: Router_B customer_a VRF Routing Table

```
Router_B# sh ip route vrf customer_a
Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default, U - per-user static route, o - ODR
       P - periodic downloaded static route

Gateway of last resort is not set

C    192.168.4.0/24 is directly connected, FastEthernet0.1
O    192.168.1.0/24 [110/2] via 192.168.100.1, 00:56:24, POS0.2
C    192.168.100.0/24 is directly connected, POS0.2
```

Example 13-9: Router_B customer_b VRF Routing Table

```
Router_B# show ip route vrf customer_b
Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default, U - per-user static route, o - ODR
       P - periodic downloaded static route

Gateway of last resort is not set

C    192.168.200.0/24 is directly connected, POS0.3
C    192.168.5.0/24 is directly connected, FastEthernet1.1
O    192.168.2.0/24 [110/2] via 192.168.200.1, 00:10:51, POS0.3
```

Monitoring and Verifying VRF Lite

Table 13-1 shows the privileged EXEC commands for monitoring and verifying VRF Lite.

Table 13-1: Commands for Monitoring and Verifying VRF Lite

| Command | Purpose |
|---|--|
| Router# show ip vrf | Displays the set of VRFs and interfaces. |
| Router# show ip route vrf <i>vrf-name</i> | Displays the IP routing table for a VRF. |
| Router# show ip protocols vrf <i>vrf-name</i> | Displays the routing protocol information for a VRF. |
| Router# ping vrf <i>vrf-name</i> ip <i>ip-address</i> | Pings an ip address that has a specific VRF. |