

This chapter provides remove (RMV) commands for the Cisco ONS 15454 SDH and Cisco ONS 15600 SDH.

Contents

- 1
RMV-<MOD2>
 - ◆ 1.1
Usage
Guidelines
 - ◆ 1.2
Category
 - ◆ 1.3
Security
 - ◆ 1.4
Input
Format
 - ◆ 1.5
Input
Example
 - ◆ 1.6
Input
Parameters
- 2
RMV-EQPT
 - ◆ 2.1
Usage
Guidelines
 - ◆ 2.2
Category
 - ◆ 2.3
Security
 - ◆ 2.4
Input
Format
 - ◆ 2.5
Input
Example
 - ◆ 2.6
Input
Parameters

RMV-<MOD2>

The Remove 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS3I, DV6000, E1, E3, E4, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, STM4, STM64, STM1, STM16, OCH, OMS, OTS, POS, STM1E, VC3, VC44C, VC38C, VC464C, VC48C, STS36C, VC4, VC416C, VC42C, VC43C, or VC12 (RMV-<MOD2>) command removes a facility from service. See [Table 27-1](#) for supported modifiers by platform.

Usage Guidelines

None

Category

Ports

Security

Maintenance

Input Format

RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

Input Example

RMV-E1:CISCO:FAC-1-1:1;

Input Parameters

<code><AID></code>	Access identifier from the ALL .
--------------------------	--

RMV-EQPT

The Remove Equipment (RMV-EQPT) command removes equipment from the In Service state and places it into the Maintenance state.

Usage Guidelines

This command is applicable only to equipment that is in transition from the In-Service state to the Maintenance state.

Category

Equipment

Security

Maintenance

Input Format

RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];

Input Example

RMV-EQPT:CISCO:SLOT-1:1;

Input Parameters

<AID>	Access identifier from the <u>EQPT</u> .
-------	--