This chapter provides cancel (CANC) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

## **Contents**

- <u>1 CANC</u>
  - ♦ <u>1.1</u>

<u>Usage</u>

**Guidelines** 

- **♦** 1.2
- **Category**
- **♦** 1.3

**Security** 

- **♦** <u>1.4</u>
  - **Output**
  - **Format**
- **♦** 1.5
  - Output
  - **Example**
- **♦** 1.6
  - **Output**
  - **Parameters**
- 2

#### **CANC-USER**

- **♦** 2.1
  - <u>Usage</u>

**Guidelines** 

- **♦** 2.2
  - **Category**
- **♦** 2.3
- **Security**
- ◆ <u>2.4</u>
  - <u>Input</u>
- **Format**
- **♦** 2.5
  - <u>Input</u>
  - **Example**
- **◆** 2.6
  - <u>Input</u>

**Parameters** 

• 3

## **CANC-USER-SECU**

- **♦** 3.1
  - <u>Usage</u>
- **Guidelines**
- **♦** 3.2
  - Category
- **♦** 3.3
  - **Security**
- ♦ <u>3.4</u>
  - <u>Input</u>
  - **Format**

Contents 1

- ♦ <u>3.5</u>
  - <u>Input</u>
  - **Example**
- **♦** 3.6

<u>Input</u>

**Parameters** 

### **CANC**

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel (CANC) message reports the occurrence of a session timeout event.

## **Usage Guidelines**

CANC is an autonomous message transmitted by the NE to a user when a session established by that user is terminated because no messages were exchanged for a long period of time (a timeout). There is a default timeout period based on the user's privilege/security level. Starting with Release 4.0, timeouts can be provisioned through CTC. Starting with Software Release 4.6, timeouts can be provisioned through TL1 with the SET-ATTR-SECUDFLT command. The default timeouts based on privilege/security level are:

- A Superuser [SUPER] has a timeout period of 15 minutes.
- A Provisioning [PROV] user has a timeout period of 30 minutes.
- A Maintenance [MAINT] user has a timeout period of 60 minutes.
- A Retrieve [RTRV] user has no timeout period.

When a timeout occurs, the corresponding port drops the session and the next session initiation at that port requires the regular login procedure.

The CANC message is only used to indicate that a session has been terminated because of a timeout. If a session is terminated for a different reason (for example, forced logout, loss of communication), the REPT EVT SESSION message is used.

#### **Category**

Security

#### **Security**

Retrieve

#### **Output Format**

SID DATE TIME A ATAG CANC "<UID>" :

#### **Output Example**

TID-000 1998-06-20 14:30:00 A 100.100 CANC "CISCO15"

CANC 2

:

## **Output Parameters**

| <uid></uid> | The user identifier (user ID) of the person logged in. Refers to the user ID of a user whose |
|-------------|--|
| <uid></uid> | session is terminated due to timeout. UID is a string.                                       |

## **CANC-USER**

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel User (CANC-USER) command logs a user out of an active session with the NE.

Note: The USERID field of this command is a mandatory field.

### **Usage Guidelines**

For the CANC-USER command:

CANC-USER:[TID]:[STRING]:CTAG

the syntax of the user ID ([STRING]) is not checked. Invalid syntax for the user ID is permitted and the user ID must not exceed 10 characters.

### Category

Security

### **Security**

Retrieve

#### **Input Format**

CANC-USER:[<TID>]:<USERID>:<CTAG>;

#### **Input Example**

CANC-USER:PETALUMA:TERRI:101;

#### **Input Parameters**

<USERID> Identifies the user to the system. user ID can be up to 10 alphanumeric characters. It is a string.

#### **CANC-USER-SECU**

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel User Security (CANC-USER-SECU) command forces a user off of the NE.

#### **Usage Guidelines**

The UID specified can be a single user ID or a list of user IDs separated by "&". The keyword ALL is not permitted. The UID specified cannot be the user ID of the administrator issuing the command.

Output Example 3

## ONS\_SONET\_TL1\_Command\_Guide\_R8.5.1\_--\_CANC\_Commands\_and\_Messages

**Note:** This command will log out ALL sessions on the NE (TL1 and Cisco Transport Controller [CTC]) of a user whose user ID matches the UID specified in the command.

## **Category**

Security

# **Security**

Superuser

## **Input Format**

CANC-USER-SECU:[<TID>]:<UID>:<CTAG>;

## **Input Example**

CANC-USER-SECU:PETALUMA:CISCO10:100;

# **Input Parameters**

|   | <uid></uid> | The user identifier (user ID) of the person logged in. UID can be a list of user IDs separated by "&". The keyword ALL may not be used to specify all users on an NE. UID is a string. |
|---|-------------|--|
| 1 |             | The keyword ALL may not be used to specify all users on an NE. UID is a string.  |

Usage Guidelines 4