

This chapter provides cancel (CANC) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

## Contents

- 1 CANC
  - ◆ 1.1  
Usage  
Guidelines
  - ◆ 1.2  
Category
  - ◆ 1.3  
Security
  - ◆ 1.4  
Output  
Format
  - ◆ 1.5  
Output  
Example
  - ◆ 1.6  
Output  
Parameters
- 2  
CANC-USER
  - ◆ 2.1  
Usage  
Guidelines
  - ◆ 2.2  
Category
  - ◆ 2.3  
Security
  - ◆ 2.4  
Input  
Format
  - ◆ 2.5  
Input  
Example
  - ◆ 2.6  
Input  
Parameters
- 3  
CANC-USER-SECU
  - ◆ 3.1  
Usage  
Guidelines
  - ◆ 3.2  
Category
  - ◆ 3.3  
Security
  - ◆ 3.4  
Input  
Format

◆ 3.5

Input

Example

◆ 3.6

Input

Parameters

## CANC

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel (CANC) message reports the occurrence of a session timeout event.

### Usage Guidelines

CANC is an autonomous message transmitted by the NE to a user when a session established by that user is terminated because no messages were exchanged for a long period of time (a timeout). There is a default timeout period based on the user's privilege/security level. Starting with Release 4.0, timeouts can be provisioned through CTC. Starting with Software Release 4.6, timeouts can be provisioned through TL1 with the SET-ATTR-SECUDFLT command. The default timeouts based on privilege/security level are:

- A Superuser [SUPER] has a timeout period of 15 minutes.
- A Provisioning [PROV] user has a timeout period of 30 minutes.
- A Maintenance [MAINT] user has a timeout period of 60 minutes.
- A Retrieve [RTRV] user has no timeout period.

When a timeout occurs, the corresponding port drops the session and the next session initiation at that port requires the regular login procedure.

The CANC message is only used to indicate that a session has been terminated because of a timeout. If a session is terminated for a different reason (for example, forced logout, loss of communication), the REPT EVT SESSION message is used.

### Category

Security

### Security

Retrieve

### Output Format

```
SID DATE TIME
A ATAG CANC
"<UID>"
;
```

### Output Example

```
TID-000 1998-06-20 14:30:00
A 100.100 CANC
"CISCO15"
```

;

## Output Parameters

<UID>	The user identifier (user ID) of the person logged in. Refers to the user ID of a user whose session is terminated due to timeout. UID is a string.
-------	---

## CANC-USER

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel User (CANC-USER) command logs a user out of an active session with the NE.

**Note:** The USERID field of this command is a mandatory field.

## Usage Guidelines

For the CANC-USER command:

CANC-USER:[TID]:[STRING]:CTAG

the syntax of the user ID ([STRING]) is not checked. Invalid syntax for the user ID is permitted and the user ID must not exceed 10 characters.

## Category

Security

## Security

Retrieve

## Input Format

CANC-USER:[<TID>]:<USERID>:<CTAG>;

## Input Example

CANC-USER:PETALUMA:TERRI:101;

## Input Parameters

<USERID>	Identifies the user to the system. user ID can be up to 10 alphanumeric characters. It is a string.
----------	---

## CANC-USER-SECU

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Cancel User Security (CANC-USER-SECU) command forces a user off of the NE.

## Usage Guidelines

The UID specified can be a single user ID or a list of user IDs separated by "&". The keyword ALL is not permitted. The UID specified cannot be the user ID of the administrator issuing the command.

Output Example

**Note:** This command will log out ALL sessions on the NE (TL1 and Cisco Transport Controller [CTC]) of a user whose user ID matches the UID specified in the command.

## Category

Security

## Security

Superuser

## Input Format

CANC-USER-SECU:[<TID>]:<UID>:<CTAG>;

## Input Example

CANC-USER-SECU:PETALUMA:CISCO10:100;

## Input Parameters

<UID>	The user identifier (user ID) of the person logged in. UID can be a list of user IDs separated by "&". The keyword ALL may not be used to specify all users on an NE. UID is a string.
-------	---