

This chapter provides clear (CLR) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

## Contents

- 1
  - CLR-COND-SECU
    - ◆ 1.1
      - Usage
      - Guidelines
    - ◆ 1.2
      - Category
    - ◆ 1.3
      - Security
    - ◆ 1.4
      - Input
      - Formats
    - ◆ 1.5
      - Input
      - Examples
    - ◆ 1.6
      - Input
      - Parameters

## CLR-COND-SECU

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Clear Security Condition (CLR-COND-SECU) command clears the specified standing condition.

### Usage Guidelines

In Software Release 6.0 and later, only the INTRUSION-PSWD parameter value is supported.

### Category

Security

### Security

Superuser

### Input Formats

```
CLR-COND-SECU:[<TID>]::<CTAG>[::<SECUALMTYPE>];
```

### Input Examples

```
CLR-COND-SECU:CISCO::123::INTRUSION-PSWD:
```

## Input Parameters

|  |  |
|--|--|
| <SECUALMTYPE>  | Secure alarm type. Defaults to INTRUSION-PSWD. The parameter type is security alarm type (SECUALMTYPE).  |
| <ul style="list-style-type: none"> <li>• INTRUSION-PSWD</li> </ul> | Condition raised after an invalid password is used during login. Condition is raised only if the password is used a specified number of times. |