

This chapter provides remove (RMV) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

## Contents

- 1  
RMV-<MOD2>
  - ◆ 1.1  
Usage  
Guidelines
  - ◆ 1.2  
Category
  - ◆ 1.3  
Security
  - ◆ 1.4  
Input  
Format
  - ◆ 1.5  
Input  
Example
  - ◆ 1.6  
Input  
Parameters
- 2  
RMV-EQPT
  - ◆ 2.1  
Usage  
Guidelines
  - ◆ 2.2  
Category
  - ◆ 2.3  
Security
  - ◆ 2.4  
Input  
Format
  - ◆ 2.5  
Input  
Example
  - ◆ 2.6  
Input  
Parameters

## RMV-<MOD2>

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RMV-<MOD2>) command removes a facility from service.

## Usage Guidelines

See [Table 28-1](#) for supported modifiers by platform.

## Category

Ports

## Security

Maintenance

## Input Format

RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

## Input Example

RMV-EC1:CISCO:FAC-1-1:1;

## Input Parameters

<AID>	Access identifier from the <a href="#">ALL</a>
-------	--

## RMV-EQPT

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove Equipment (RMV-EQPT) command removes equipment from the In Service (IS) state and places it into the Maintenance (MT) state.

## Usage Guidelines

This command is only applicable to equipment that is in transition from the IS state to the MT state.

## Category

Equipment

## Security

Maintenance

## Input Format

RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];

## Input Example

RMV-EQPT:CISCO:SLOT-1:1;

## Input Parameters

<AID>	Access identifier from the <u>EQPT</u> .
-------	--