

This chapter provides test (TST) commands for the Cisco ONS 15454.

Contents

- 1
TST-INSERRBITS-<MOD2>
 - ◆ 1.1 Usage Guidelines
 - ◆ 1.2 Category
 - ◆ 1.3 Security
 - ◆ 1.4 Input Format
 - ◆ 1.5 Input Example
 - ◆ 1.6 Input Parameters

TST-INSERRBITS-<MOD2>

(CISCO ONS 15454) The test inserted error bits for DS1, T1, or T3 (TST-INSERRBITS-<MOD2>) command tests the connectivity and error count on the traffic line, running on the DS1, T1, and T3 ports of the electrical card.

Usage Guidelines

Before issuing this command, bit error rate testing (BERT) must be enabled on the port and the SYNC STATUS of BERT on the port must be UP.

Note: This command is limited to DS1/E1-56 and DS3XM-12 electrical cards.

Category

Ports

Security

Provisioning

Input Format

TST-INSERRBITS-<MOD2>:[<TID>]:<AID>:<CTAG>:::BITERRS=<BITERRS>;

Input Example

TST-INSERRBITS-DS1::FAC-2-1:CTAG:::BITERRS=SINGLE;

Input Parameters

<AID>	Access identifier from the <u>FACILITY</u> .
<BITERRS>	Specifies the error rate to be injected for BERT. The parameter type is BITERR.
	Stops inserting bit errors.

ONS_SONET_TL1_Command_Guide_R8.5.1_--_TST_Commands

• STOP	
• SINGLE	Inserts single bit errors.
• 1E-3	Inserts bit errors at the 1E-3 rate.
• 1E-4	Inserts bit errors at the 1E-4 rate.
• 1E-5	Inserts bit errors at the 1E-5 rate.
• 1E-6	Inserts bit errors at the 1E-6 rate.