



Navigation

- [PfR Home Page](#)
- [PfR Troubleshooting Home Page](#)

Not collecting active data

<p>Is mode monitor active or active throughput or both configured for the prefix under question?</p> <pre>show run</pre> <p>or</p> <pre>show oer master prefix <prefix> policy</pre> <p>to verify the monitor mode</p>	No >	Configure monitor mode active or active throughput or both for the prefix.
Yes		
<p>Is prefix in default state when mode monitor active is configured?</p> <pre>show oer master <prefix traffic-class></pre>	No >	<p>Look for the @ sign under the Time column.</p> <p>This means pfr is currently probing all exits and the probing cycle will end in x seconds</p>
Yes		
<p>Is PfR creating probes?</p> <pre>show oer master active</pre>	No>	Debug oer border active on BR

PfR:Troubleshooting:MeasurementsActive

<p>and</p> <p>show oer master active force</p> <p>on MC and</p> <p>show oer border active</p> <p>on BR</p>		
<p>Yes</p>		
<p>Is the # of comps 0 in the outputs of</p> <p>show oer master active</p> <p>and</p> <p>show oer master active force</p> <p>on MC or</p> <p>show oer border active</p> <p>on BR</p>	<p>Yes ></p>	<p>Check show ip sla config on BR to confirm the ip sla probe is created by PfR.</p> <p>Also, issue show ip sla operation and show ip sla statistics on BR to verify the probes are working.</p> <p>Additionally, try to manually configure ip sla probe on the BR to the same probe target to verify sla probe is working.</p>