

## show Command Differences

The following table lists the **show** commands that are in FWSM software but not in ASA software.

|   |
|---|
| <b>show asr</b>   |
| <b>show bridge-group</b>                                    |
| <b>show conn up</b>   |
| <b>show cpu threshold</b>                                   |
| <b>show dispatch statistics</b>                             |
| <b>show dispatch table</b>                                  |
| <b>show flashfs</b>   |
| <b>show ip bgp</b>  |
| <b>show nic</b>   |
| <b>show np</b> <i>1   2   3 keywords</i>                    |
| <b>show np</b> <i>keyword</i>                               |
| <b>show npc</b> <i>keywords</i>                             |
| <b>show pc conn</b>   |
| <b>show pc local-host</b>                                   |
| <b>show pcdebug</b>   |
| <b>show pc xlate</b>  |
| <b>show resource acl-partition</b>                          |
| <b>show resource partition</b>                              |
| <b>show resource rule</b>                                   |
| <b>show route-inject</b>                                    |
| <b>show route-monitor</b>                                   |
| <b>show running-config all control-point tcp-normalizer</b> |
| <b>show running-config all ftp-map</b>                      |
| <b>show running-config all grp-map</b>                      |
| <b>show running-config all h225-map</b>                     |
| <b>show running-config all mgcp-map</b>                     |
| <b>show running-config all rip</b>                          |
| <b>show running-config all route-inject</b>                 |
| <b>show running-config all route-monitor</b>                |
| <b>show running-config all xlate-bypass</b>                 |