

## show Command Differences

The following table lists the **show** commands that are in FWSM software but not in ASA software.

<b>show asr</b>
<b>show bridge-group</b>
<b>show conn up</b>
<b>show cpu threshold</b>
<b>show dispatch statistics</b>
<b>show dispatch table</b>
<b>show flashfs</b>
<b>show ip bgp</b>
<b>show nic</b>
<b>show np</b> <i>1   2   3 keywords</i>
<b>show np</b> <i>keyword</i>
<b>show npc</b> <i>keywords</i>
<b>show pc conn</b>
<b>show pc local-host</b>
<b>show pcdebug</b>
<b>show pc xlate</b>
<b>show resource acl-partition</b>
<b>show resource partition</b>
<b>show resource rule</b>
<b>show route-inject</b>
<b>show route-monitor</b>
<b>show running-config all control-point tcp-normalizer</b>
<b>show running-config all ftp-map</b>
<b>show running-config all grp-map</b>
<b>show running-config all h225-map</b>
<b>show running-config all mgcp-map</b>
<b>show running-config all rip</b>
<b>show running-config all route-inject</b>
<b>show running-config all route-monitor</b>
<b>show running-config all xlate-bypass</b>