

show Command Differences

The following table lists the **show** commands that are in FWSM software but not in ASA software.

show asr
show bridge-group
show conn up
show cpu threshold
show dispatch statistics
show dispatch table
show flashfs
show ip bgp
show nic
show np <i>1 2 3 keywords</i>
show np <i>keyword</i>
show npc <i>keywords</i>
show pc conn
show pc local-host
show pcdebug
show pc xlate
show resource acl-partition
show resource partition
show resource rule
show route-inject
show route-monitor
show running-config all control-point tcp-normalizer
show running-config all ftp-map
show running-config all grp-map
show running-config all h225-map
show running-config all mgcp-map
show running-config all rip
show running-config all route-inject
show running-config all route-monitor
show running-config all xlate-bypass