

The\_status\_of\_the\_call\_server\_is\_partial

<b>Problem Summary</b>	The Status of the call server is partial.
<b>Error Message</b>	NA
<b>Possible Cause</b>	NA
<b>Recommended Action</b>	The ICM system assigns this number when you add the PG using icmsetup on the Unified ICM system. On the Unified CVP system, run icmsetup. On the Peripheral Gateway Component Properties window, enter the same Logical Controller ID the Unified ICM system assigned previously
<b>Release</b>	NA
<b>Associated CDETS #</b>	None.

**Back:** [Troubleshooting PG installed on Unified CVP server](#)