

Main page: [Cisco Unity Express -- REST PI Service Operations](#)

Previous page: [Cisco Unity Express -- Fax Settings REST PI Service Operation](#)

Next page: [Cisco Unity Express -- Subsystem SIP REST PI Service Operation](#)

Search the Cisco Unity Express documentation on the DocWiki:

Loading


Contents

- [1 Subsystem JTAPI](#)
 - ◆ [1.1 Classes](#)
 - ◇ [1.1.1 SubsystemJTAPI](#)
 - ◇ [1.1.2 RedirectCSS](#)
 - ◆ [1.2 Resources](#)

Subsystem JTAPI

Classes

Figure 14: Subsystem JTAPI

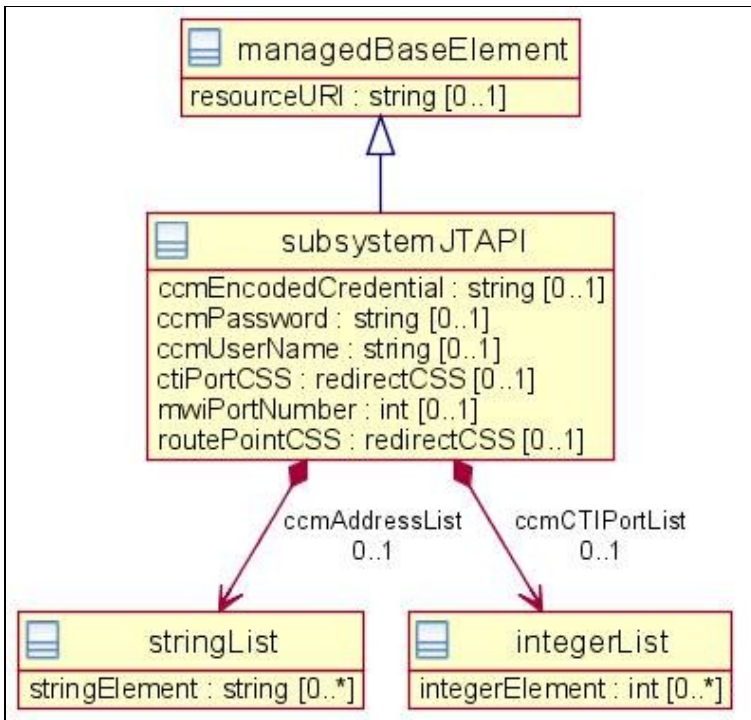

SubsystemJTAPI

Class Name	SubsystemJTAPI		
Extends From	ManagedBaseElement		
Description	Represents system-level JTAPI related configuration.		
XML Namespace	http://jtapi.subsystem.model.rest.aesop.cisco.com		
Field Name	Type	Constraints	Comments
ccmAddressList	StringList		List of IP address or hostname of Cisco Unified Communications Manager servers.
ccmCTIPortList	IntegerList		List of Cisco Unified Communications Manager CTI ports.
ccmEncodedCredential	String	During the update operation, ccmEncodedCredential and plain text credentials (ccmUserName , ccmPassword) cannot be specified together.	Cisco Unified Communications Manager JTAPI username and password in encrypted form
ccmUserName	String	During the update operation, ccmEncodedCredential	CUCM JTAPI user name

Cisco_Unity_Express_--_Subsystem_JTAPI_REST_Pi_Service_Operation

		and plain text credentials (ccmUserName , ccmPassword) cannot be specified together.	
ccmPassword	String	During update operation, ccmEncodedCredential and plain text credentials (ccmUserName , ccmPassword) cannot be specified together.	CUCM password for JTAPI user
mwiPortNumber	Integer		CUCM CTI port to use for MWI
ctiPortCSS	RedirectCSS		Calling search space used to redirect calls from CTI ports to elsewhere.
routePointCSS	RedirectCSS		Calling search space used to redirect calls from route points to CTI ports

RedirectCSS

Class Name	RedirectCSS (<i>Enumeration Class</i>)
Extends From	BaseElement
Description	Enumeration for calling search space to use while redirecting calls
XML Namespace	http://jtapi.subsystem.model.rest.aesop.cisco.com
Enum Values	CALLING_PARTY (Use the original calling party's calling search space to redirect) REDIRECTING_PARTY (Use the redirecting party's calling search space to redirect) CCM (default calling search space)

Resources

Resource URI	Operation	Input	Return Value
/ subsystem/jtapi	GET		SubsystemJTAPI
	PUT	SubsystemJTAPI	