

Contents

- 1 Troubleshooting Tools and Methodology
- 2 Using Cisco MDS 9000 Family Tools
 - ◆ 2.1 Command-Line Interface Troubleshooting Commands
 - ◆ 2.2 CLI Debug
 - ◆ 2.3 FC Ping and FC Traceroute
 - ◆ 2.4 Using FC Ping
 - ◆ 2.5 Using FC Traceroute
 - ◆ 2.6 Monitoring Processes and CPUs
 - ◆ 2.7 Viewing Running Processes on Device Manager
 - ◆ 2.8 Using the show processes CLI Command
 - ◆ 2.9 Viewing CPU Time In Device Manager
 - ◆ 2.10 Using the show processes cpu CLI Command
 - ◆ 2.11 Using the show system resource CLI Command
 - ◆ 2.12 Using On-Board Failure Logging
 - ◆ 2.13 Configuring OBFL for the Switch
 - ◆ 2.14 Configuring OBFL for a Module
 - ◆ 2.15 Displaying OBFL Logs
 - ◆ 2.16 Fabric Manager Tools
 - ◆ 2.17 Fabric Manager and Device Manager
 - ◆ 2.18 Analyzing Switch Device Health
 - ◆ 2.19 Analyzing End-to-End Connectivity
 - ◆ 2.20 Analyzing Switch Fabric Configuration
 - ◆ 2.21 Analyzing the Results of Merging Zones
 - ◆ 2.22 Alerts and Alarms
 - ◆ 2.23 Device Manager: RMON Threshold Manager
 - ◆ 2.24 Fibre Channel Name Service
 - ◆ 2.25 SCSI Target Discovery
 - ◆ 2.26 SNMP and RMON Support
 - ◆ 2.27 Using RADIUS
 - ◆ 2.28 Using Syslog
 - ◆ 2.29 Logging Levels
 - ◆ 2.30 Enabling Logging for Telnet or SSH
 - ◆ 2.31 Using Fibre Channel SPAN
- 3 Using Cisco Network Management Products
 - ◆ 3.1 Cisco MDS 9000 Family Port Analyzer Adapter
 - ◆ 3.2 Cisco Fabric Analyzer
 - ◆ 3.3 IP Network Simulator
- 4 Using Other Troubleshooting Products
 - ◆ 4.1 Fibre Channel Testers
 - ◆ 4.2 Fibre Channel Protocol Analyzers

- [5 Using Host Diagnostic Tools](#)

Troubleshooting Tools and Methodology

This appendix describes the troubleshooting tools and methodology available for the Cisco MDS 9000 Family multilayer directors and fabric switches. It includes the following sections:

- Using Cisco MDS 9000 Family Tools
- Using Cisco Network Management Products
- Using Other Troubleshooting Products
- Using Host Diagnostic Tools


Using Cisco MDS 9000 Family Tools

If the server does not see its storage and you cannot use the information available on the host side to determine the root cause of the problem, you can obtain additional information from a different viewpoint using the troubleshooting tools provided with the Cisco MDS 9000 Family switches. This section introduces these tools and describes the kinds of problems for which you can use each tool. It includes the following topics:

- Command-Line Interface Troubleshooting Commands
- CLI Debug
- FC Ping and FC Traceroute
- Monitoring Processes and CPUs
- Using On-Board Failure Logging
- Fabric Manager Tools
- Fibre Channel Name Service
- SNMP and RMON Support
- Using RADIUS
- Using Syslog
- Using Fibre Channel SPAN

Command-Line Interface Troubleshooting Commands

The command-line interface (CLI) lets you configure and monitor a Cisco MDS 9000 Family switch using a local console or remotely using a Telnet or SSH session. The CLI provides a command structure similar to Cisco IOS software, with context-sensitive help, **show** commands, multi-user support, and roles based access control.

 **Note:** Use the **show running interface** CLI command to view the interface configuration in Cisco SAN-OS Release 3.0(1) or later. The interface configuration as seen in the **show running-config** CLI command is no longer consolidated.


CLI Debug

The Cisco MDS 9000 Family switches support an extensive debugging feature set for actively troubleshooting a storage network. Using the CLI, you can enable debugging modes for each switch feature and view a real-time updated activity log of the control protocol exchanges. Each log entry is time-stamped and listed in chronological order. Access to the debug feature can be limited through the CLI roles mechanism and can be partitioned on a per-role basis. While **debug** commands show realtime information, the **show** commands can be used to list historical information as well as realtime.

 **Note:** You can log debug messages to a special log file, which is more secure and easier to process than sending the debug output to the console.

By using the '?' option, you can see the options that are available for any switch feature, such as FSPF. A log entry is created for each entered command in addition to the actual debug output. The debug output shows a time-stamped account of activity occurring between the local switch and other adjacent switches.

You can use the debug facility to keep track of events, internal messages, and protocol errors. However, you should be careful with using the debug utility in a production environment, because some options may prevent access to the switch by generating too many messages to the console or if very CPU-intensive may seriously affect switch performance.

 **Note:** We recommend that you open a second Telnet or SSH session before entering any **debug** commands. If the debug session overwhelms the current output window, you can use the second session to enter the **undebg all** command to stop the debug message output.

The following is an example of the output from the **debug flogi event** command:

```
switch# debug flogi event interface fc1/1

Dec 10 23:40:26 flogi:      current state [FLOGI_ST_FLOGI_RECEIVED]
Dec 10 23:40:26 flogi:      current event [FLOGI_EV_VALID_FLOGI]
Dec 10 23:40:26 flogi:      next state   [FLOGI_ST_GET_FCID]
Dec 10 23:40:26 flogi: fu_fsm_execute: ([1]21:00:00:e0:8b:08:96:22)
Dec 10 23:40:26 flogi:      current state [FLOGI_ST_GET_FCID]
Dec 10 23:40:26 flogi:      current event [FLOGI_EV_VALID_FCID]
Dec 10 23:40:26 flogi:      next state   [FLOGI_ST_PERFORM_CONFIG]
Dec 10 23:40:26 flogi: fu_fsm_execute: ([1]21:00:00:e0:8b:08:96:22)
Dec 10 23:40:26 flogi:      current state [FLOGI_ST_PERFORM_CONFIG]
Dec 10 23:40:26 flogi:      current event [FLOGI_EV_CONFIG_DONE_PENDING]
Dec 10 23:40:26 flogi:      next state   [FLOGI_ST_PERFORM_CONFIG]
Dec 10 23:40:26 flogi: fu_fsm_execute: ([1]21:00:00:e0:8b:08:96:22)
Dec 10 23:40:26 flogi:      current state [FLOGI_ST_PERFORM_CONFIG]
Dec 10 23:40:26 flogi:      current event [FLOGI_EV_RIB_RESPOSE]
Dec 10 23:40:26 flogi:      next state   [FLOGI_ST_PERFORM_CONFIG]
```

The following is a summary of some of the common **debug** commands available Cisco SAN-OS:

!+ Table B-1
Debug Commands

Debug command

Purpose

aaa

Enables AAA debugging.

all

Enables all debugging.

biosd

Enables BIOS daemon debugging.

bootvar

Enables bootvar debugging.

callhome

Enables debugging for Call Home.

cdp

Enables CDP debugging.

cfs

Enables Cisco Fabric Services debugging.

cimserver

Enables CIM server debugging.

core

Enables core daemon debugging.

device-alias

Enables device alias debugging.

dstats

Enables delta statistics debugging.

ethport

Enables port debugging.

exceptionlog

Enables exception log debugging.

fc-tunnel

Enables Fibre Channel tunnel debugging.

fc2

Enables FC2 debugging.

fc2d

Enables FC2D debugging.

fcc

CLI Debug

Enables Fibre Channel congestion debugging.

fcdomain

Enables fcdomain debugging.

fcfwd

Enables fcfwd debugging.

fcns

Enables Fibre Channel name server debugging.

fcs

Enables Fabric Configuration Server debugging.

fdmi

Enables FDMI debugging.

flogi

Enables fabric login debugging.

fm

Enables feature manager debugging.

fspf

Enables FSPF debugging.

hardware

Enables hardware, kernel loadable module parameter debugging.

idehsd

Enables idehsd manager debugging.

ilc_helper

Enables ilc-helper debugging.

ipacl

Enables IP ACL debugging.

ipconf

Enables IP configuration debugging.

ipfc

Enables IPFC debugging.

klm

Enables kernel loadable module parameter debugging.

license

Enables license debugging.

logfile

Directs the debug command output to a logfile.

module

Enables module manager debugging.

ntp

Enables NTP debugging.

platform

Enables platform manager debugging.

port

Enables port debugging.

port-channel

Enables PortChannel debug.

qos

Enables QOS Manager debugging.

radius

Enables RADIUS debugging.

rib

Enables RIB debugging.

rlir

Enables RLIR debugging.

rscn

CLI Debug

Enables RSCN debugging.

scsi-target

Enables scsi target daemon debugging.

security

Enables security and accounting debugging.

snmp

Enables SNMP debugging.

span

Enables SPAN debugging.

svc

Enables SVC debugging.

system

Enables System debugging.

tlport

Enables TL Port debugging.

vni

Enables virtual network interface debugging.

vrrp

Enables VRRP debugging.

vsan

Enables VSAN manager debugging.


wwn

Enables WWN manager debugging.

zone

Enables zone server debugging.

FC Ping and FC Traceroute

 **Note:** Use the Fibre Channel ping and Fibre Channel traceroute features to troubleshoot problems with connectivity and path choices. Do not use them to identify or resolve performance issues.

Ping and traceroute are two of the most useful tools for troubleshooting TCP/IP networking problems. The ping utility generates a series of *echo* packets to a destination across a TCP/IP internetwork. When the echo packets arrive at the destination, they are rerouted and sent back to the source. Using ping, you can verify connectivity to a particular destination across an IP routed network.

The traceroute utility operates in a similar fashion, but can also determine the specific path that a frame takes to its destination on a hop-by-hop basis.

These tools have been migrated to Fibre Channel for use with the Cisco MDS 9000 Family switches and are called *FC ping* and *FC traceroute*. You can access FC ping and FC traceroute from the CLI or from Fabric Manager.

This section contains the following topics:

- Using FC Ping
- Using FC Traceroute

Using FC Ping

The FC ping tool:

- Checks end-to-end connectivity.
- Uses an pWWN or FCID.

FC ping allows you to ping a Fibre Channel N port or end device. (See Example B-1.) By specifying the FCID or Fibre Channel address, you can send a series of frames to a target N port. Once these frames reach the target device's N port, they are looped back to the source and a time stamp is taken. FC ping helps you to verify the connectivity to an end N port. FC ping uses the PRLI Extended Link Service, and verifies the presence of a Fibre Channel entity in case of positive or negative answers.

The FC ping feature verifies reachability of a node by checking its end-to-end connectivity.

- Choose **Tools > Ping** to access FC ping using Fabric Manager.
- Invoke the FC ping feature using the CLI by providing the FC ID or the destination port WWN information in the following ways:

```
switch# fcping pwn 20:00:00:2e:c4:91:d4:54
switch# fcping fcid 0x123abc
```

Example B-1 FC Ping Command

```
switch# fcping fcid 0xef02c9 vsan 1

28 bytes from 0xef02c9 time = 1408 usec
28 bytes from 0xef02c9 time = 379 usec
28 bytes from 0xef02c9 time = 347 usec
28 bytes from 0xef02c9 time = 361 usec
28 bytes from 0xef02c9 time = 363 usec
```


5 frames sent, 5 frames received, 0 timeouts
Round-trip min/avg/max = 347/571/1408 usec

Using FC Traceroute

Use the FC Trace feature to:

- Trace the route followed by data traffic.
- Compute inter-switch (hop-to-hop) latency.

FC traceroute identifies the path taken on a hop-by-hop basis and includes a timestamp at each hop in both directions. (See Example B-2.) FC ping and FC traceroute are useful tools to check for network connectivity problems or verify the path taken toward a specific destination. You can use FC traceroute to test the connectivity of TE ports along the path between the generating switch and the switch closest to the destination.


Choose **Tools > Traceroute** on Fabric Manager or use the **fctrace** CLI command to access this feature.

Use FC Trace by providing the FC ID, the N port, or the NL port WWN of the destination. The frames are routed normally as long as they are forwarded through TE ports. After the frame reaches the edge of the fabric (the F port or FL port connected to the end node with the given port WWN or the FC ID), the frame is looped back (swapping the source ID and the destination ID) to the originator.

If the destination cannot be reached, the path discovery starts, which traces the path up to the point of failure.

The FC Trace feature works only on TE Ports. Make sure that only TE ports exist in the path to the destination. If there is an E Port in the path:


- The FC Trace frame will be dropped by that switch.
- The FC Trace will time out in the originator.
- Path discovery will not start.

 **Note:** FC traceroute will only work across EISL links.

Example B-2 fctraceroute Command

```
switch# fctrace fcid 0xef0000 vsan 1

Route present for : 0xef0000
20:00:00:05:30:00:59:de(0xffffcee)
Latency: 0 msec
20:00:00:05:30:00:58:1e(0xfffc6c)
Timestamp Invalid.
20:00:00:05:30:00:59:1e(0xffffcef)
Latency: 0 msec
20:00:00:05:30:00:59:1e(0xffffcef)
Latency: 174860 msec
20:00:00:05:30:00:58:1e(0xfffc6c)
```

 **Note:** The values rendered by the FC traceroute process do not reflect the actual latency across the switches. The actual trace value interpretation is shown in the example below.

```
switch# show fcns database vsan 600
```

```
VSAN 600
```

```
-----
FCID          TYPE  PWWN                               (VENDOR)          FC4-TYPEFEATURE
-----
0xeb01e8     NL   210000203767f7a2 (Seagate)         scsi-fcptarget
0xec00e4     NL   210000203767f48a (Seagate)         scsi-fcp
0xec00e8     NL   210000203767f507 (Seagate)         scsi-fcp
Total number of entries = 3

switch# fctrace fcid 0xeb01e8 vsan 600

Route present for 0xeb01e8
2000000530007ade(0xffffcee) ---> MDS originating the trace
Latency 0 msec
2000000c30575ec0(0xffffced) --->first hop MDS towards destination FCID
Latency 30820 msec
2000000c306c2440(0xffffceb) --> MDS which connects directly to the traced FCID (0xeb01e8)
2000000c306c2440(0xffffceb) -->idem, but looped around
Latency 0 msec
2000000c30575ec0(0xffffced) --> first hop MDS on the return path from traced FCID to
originor

switch#
```

Monitoring Processes and CPUs

There are features in both CLI and Device Manager for monitoring switch processes and CPU status and utilization.

This section contains the following topics:

- Viewing Running Processes on Device Manager
- Using the show processes CLI Command
- Viewing CPU Time In Device Manager
- Using the show processes cpu CLI Command
- Using the show system resource CLI Command


Viewing Running Processes on Device Manager

Choose **Admin > Running Processes** on Device Manager to view information about the processes currently running on a switch.(See Figure B-1.)

The dialog box display includes:

- Process ID
- The name associated with this process
- The sum of all dynamically allocated memory that this process has received from the system; this includes memory that may have been returned to the system
- The amount of CPU time the process has used, in microseconds

Figure B-1 Running Processes Dialog Box

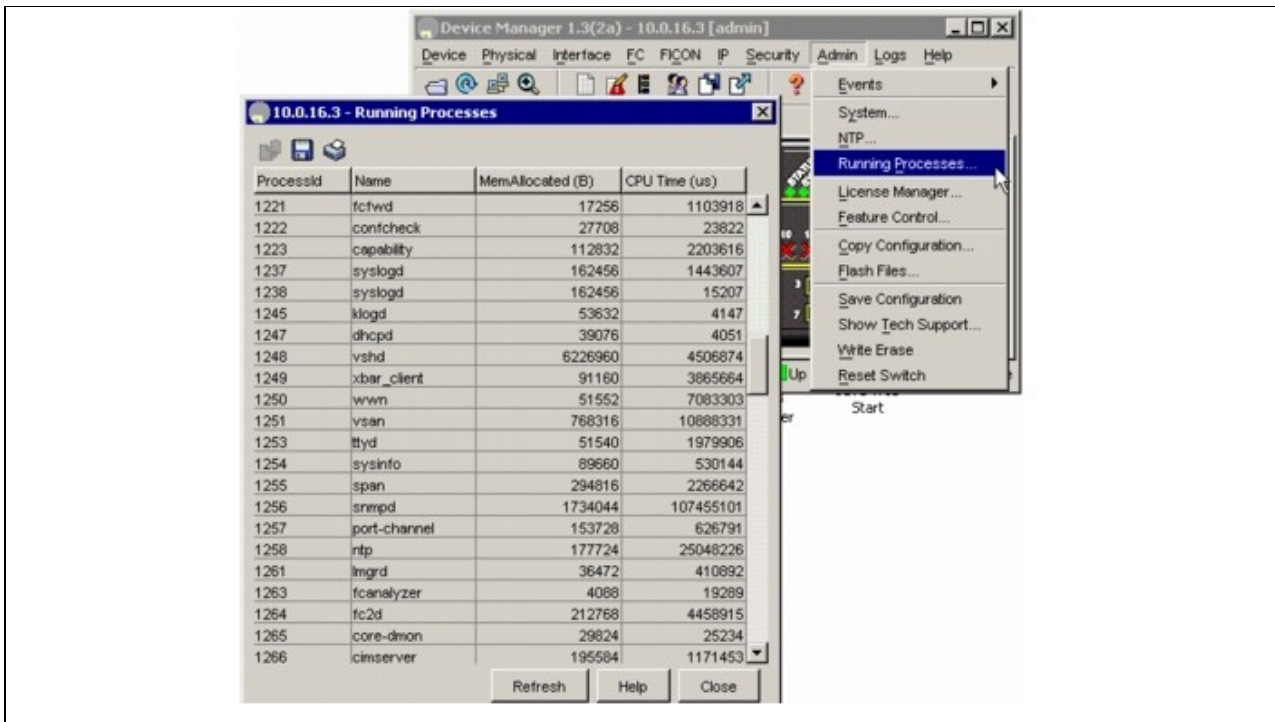


Using the show processes CLI Command

Use the **show processes** command to identify the processes that are running and the status of each process. (See Example B-3.) The command output includes:

- process ID.
- State = process state.
- PC = current program counter in hex format.
- Start_cnt = how many times a process has been started (or restarted).
- TTY = terminal that controls the process. A "-" usually means a daemon not running on any particular TTY.
- Process = name of the process.

Process states are:

- D = uninterruptible sleep (usually I/O).
- R = runnable (on run queue).
- S = sleeping.
- T = traced or stopped.
- Z = defunct ("zombie") process.
- NR = not running.
- ER = should be running but currently not running.

 **Note:** The ER state typically designates a process that has been restarted too many times, causing the system to classify it as faulty and disable it.

Example B-3 show processes Command

```
switch# show processes ?
cpu      Show processes CPU Info
log      Show information about process logs
```

memory Show processes Memory Info


```
switch# show processes
```

PID	State	PC	Start_cnt	TTY	Process
457	S	2abaa76f	1	-	portmap
1218	S	2acbacc24	1	-	licmgr
1249	S	2ade633e	1	-	xbar_client
1250	S	2aca833e	1	-	wnn
1251	S	2aebbc24	1	-	vsan
1253	S	2ade433e	1	-	ttyd
1254	S	2ac51ef4	1	-	sysinfo
1255	S	2af7333e	1	-	span

Viewing CPU Time In Device Manager

The Running Processes dialog box display can be sorted based on any column header. To sort on CPU utilization, click the CPU column header. An arrow in the column header indicates the order of CPU utilization. Click the column header to toggle between ascending or descending order.

Example B-4 CPU Time Column Header

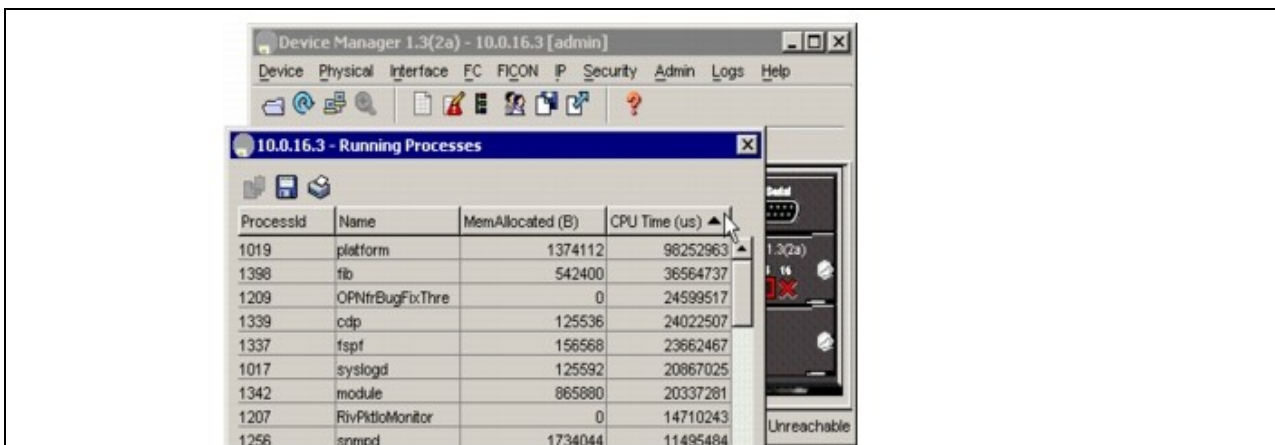

Using the show processes cpu CLI Command

Use the **show processes cpu** command to display CPU utilization. The command output includes:

- Runtime(ms) = CPU time the process has used, expressed in milliseconds.
- Invoked = number of times the process has been invoked.
- uSecs = microseconds of CPU time in average for each process invocation.
- lSec = CPU utilization in percentage for the last one second.

Example B-5 show processes cpu Command

```
switch# show processes cpu
```

PID	Runtime (ms)	Invoked	uSecs	lSec	Process
1016	7	2	3714	0.0	tftpd
1017	20627	2921172	7	0.0	syslogd
1218	299	11710	25	0.0	licmgr

Using the show processes CLI Command

1219	25	38	676	0.0	fs-daemon
1220	1558	6985	223	0.0	feature-mgr
1221	263	11772	22	0.0	fcfwd
1223	512	8996	56	0.0	capability
1237	313	29072	10	0.0	syslogd
1249	912	18815	48	0.0	xbar_client
1250	1481	6214	238	0.0	wnn
1251	1460	68079	21	0.0	vsan
1253	457	29220	15	0.0	ttyd
1254	138	6309	21	0.0	sysinfo

Using the show system resource CLI Command

Use the **show system resources** command to display system-related CPU and memory statistics. The output includes the following:

- Load is defined as number of running processes. The average reflects the system load over the past 1, 5, and 15 minutes.
- Processes displays the number of processes in the system, and how many are actually running when the command is issued.
- CPU states shows the CPU usage percentage in user mode, kernel mode, and idle time in the last one second.
- Memory usage provides the total memory, used memory, free memory, memory used for buffers, and memory used for cache in KB. Buffers and cache are also included in the used memory statistics.

Example B-6 show system resources Command

```
switch# show system resources

Load average:  1 minute: 0.00   5 minutes: 0.00   15 minutes: 0.00
Processes   : 152 total, 3 running
CPU states  : 0.0% user,  0.0% kernel,  100.0% idle
Memory usage: 960080K total,  412900K used,  547180K free
2340K buffers, 292380K cache
```

Using On-Board Failure Logging

The Generation 2 Fibre Channel switching modules provide the facility to log failure data to persistent storage, which can be retrieved and displayed for analysis. This on-board failure logging (OBFL) feature stores failure and environmental information in nonvolatile memory on the module. The information will help in post-mortem analysis of failed cards.

The data stored by the OBFL facility includes the following:

- Time of initial power-on
- Slot number of the card in the chassis
- Initial temperature of the card
- Firmware, BIOS, FPGA, and ASIC versions
- Serial number of the card
- Stack trace for crashes
- CPU hog information
- Memory leak information
- Software error messages
- Hardware exception logs
- Environmental history

- OBFL specific history information
- ASIC interrupt and error statistics history
- ASIC register dumps

Configuring OBFL for the Switch

To configure OBFL for all the modules on the switch, follow these steps:

	Command	Purpose
Step 1	switch# config terminal switch(config)#	Enters configuration mode.
Step 2	switch(config)# hw-module logging onboard	Enables all OBFL features.
	switch(config)# hw-module logging onboard cpu-hog	Enables the OBFL CPU hog events.
	switch(config)# hw-module logging onboard environmental-history	Enables the OBFL environmental history.
	switch(config)# hw-module logging onboard error-stats	Enables the OBFL error statistics.
	switch(config)# hw-module logging onboard interrupt-stats	Enables the OBFL interrupt statistics.
	switch(config)# hw-module logging onboard mem-leak	Enables the OBFL memory leak events.
	switch(config)# hw-module logging onboard miscellaneous-error	Enables the OBFL miscellaneous information.
	switch(config)# hw-module logging onboard obfl-log	Enables the boot uptime, device version, and OBFL history.
	switch(config)# no hw-module logging onboard	Disables all OBFL features.

Use the **show logging onboard status** command to display the configuration status of OBFL.

```
switch# show logging onboard status
Switch OBFL Log:                               Enabled
Module:   6 OBFL Log:                           Enabled
error-stats                                     Enabled
exception-log                                   Enabled
miscellaneous-error                             Enabled
obfl-log (boot-uptime/device-version/obfl-history) Enabled
system-health                                   Enabled
stack-trace                                     Enabled
```

Configuring OBFL for a Module

To configure OBFL for specific modules on the switch, follow these steps:

Command	Purpose
---------	---------

Step 1	switch# config terminal switch(config)#	Enters configuration mode.
Step 2	switch(config)# hw-module logging onboard module 1	Enables all OBFL features on a module.
	switch(config)# hw-module logging onboard module 1 cpu-hog	Enables the OBFL CPU hog events on a module.
	switch(config)# hw-module logging onboard module 1 environmental-history	Enables the OBFL environmental history on a module.
	switch(config)# hw-module logging onboard module 1 error-stats	Enables the OBFL error statistics on a module.
	switch(config)# hw-module logging onboard module 1 interrupt-stats	Enables the OBFL interrupt statistics on a module.
	switch(config)# hw-module logging onboard module 1 mem-leak	Enables the OBFL memory leak events on a module.
	switch(config)# hw-module logging onboard module 1 miscellaneous-error	Enables the OBFL miscellaneous information on a module.
	switch(config)# hw-module logging onboard module 1 obfl-log	Enables the boot uptime, device version, and OBFL history on a module.
	switch(config)# no hw-module logging onboard module 1	Disables all OBFL features on a module.

Use the **show logging onboard status** command to display the configuration status of OBFL.

```
switch# show logging onboard status
Switch OBFL Log:                               Enabled
Module: 6 OBFL Log:                             Enabled
error-stats                                    Enabled
exception-log                                  Enabled
miscellaneous-error                            Enabled
obfl-log (boot-uptime/device-version/obfl-history) Enabled
system-health                                  Enabled
stack-trace                                    Enabled
```

Displaying OBFL Logs

To display OBFL information stored in CompactFlash on a module, use the following commands:

Command	Purpose
show logging onboard boot-uptime	Displays the boot and uptime information.
show logging onboard cpu-hog	Displays information for CPU hog events.
show logging onboard device-version	Displays device version information.
show logging onboard endtime	Displays OBFL logs to an end time.
	Displays environmental history.

show logging onboard environmental-history	
show logging onboard error-stats	Displays error statistics.
show logging onboard exception-log	Displays exception log information.
show logging onboard interrupt-stats	Displays interrupt statistics.
show logging onboard mem-leak	Displays memory leak information.
show logging onboard miscellaneous-error	Displays miscellaneous error information.
show logging onboard module <i>slot</i>	Displays OBFL information for a specific module.
show logging onboard obfl-history	Displays history information.
show logging onboard register-log	Displays register log information.
show logging onboard stack-trace	Displays kernel stack trace information.
show logging onboard starttime	Displays OBFL logs from a specified start time.
show logging onboard system-health	Displays system health information.

Fabric Manager Tools

Fabric Manager provides fabric-wide management capabilities including discovery, multiple switch configuration, network monitoring, and troubleshooting. It provides the troubleshooting features described in the following topics:

- Fabric Manager and Device Manager
- Analyzing Switch Device Health
- Analyzing End-to-End Connectivity
- Analyzing Switch Fabric Configuration
- Analyzing the Results of Merging Zones
- Alerts and Alarms
- Device Manager: RMON Threshold Manager

 **Note:** For detailed information about using Cisco Fabric Manager, refer to the *Cisco MDS 9000 Family Fabric Manager Configuration Guide*.

Fabric Manager and Device Manager


Fabric Manager provides a map of the discovered fabric and includes tables that display statistical information about the switches in the fabric. You can also select troubleshooting tools from the Fabric Manager Tools menu.

 **Note:** When you click on a zone or VSAN in Fabric Manager, the members of the zone or VSAN are highlighted on the Fabric Manager Map pane.

Device Manager provides a graphic display of a specific switch and shows the status of each port on the switch. From Device Manager, you can drill down to get detailed statistics about a specific switch or port.

Figure B-2 shows the Device Manager Summary View window.

Figure B-2 Cisco Device Manager Summary View

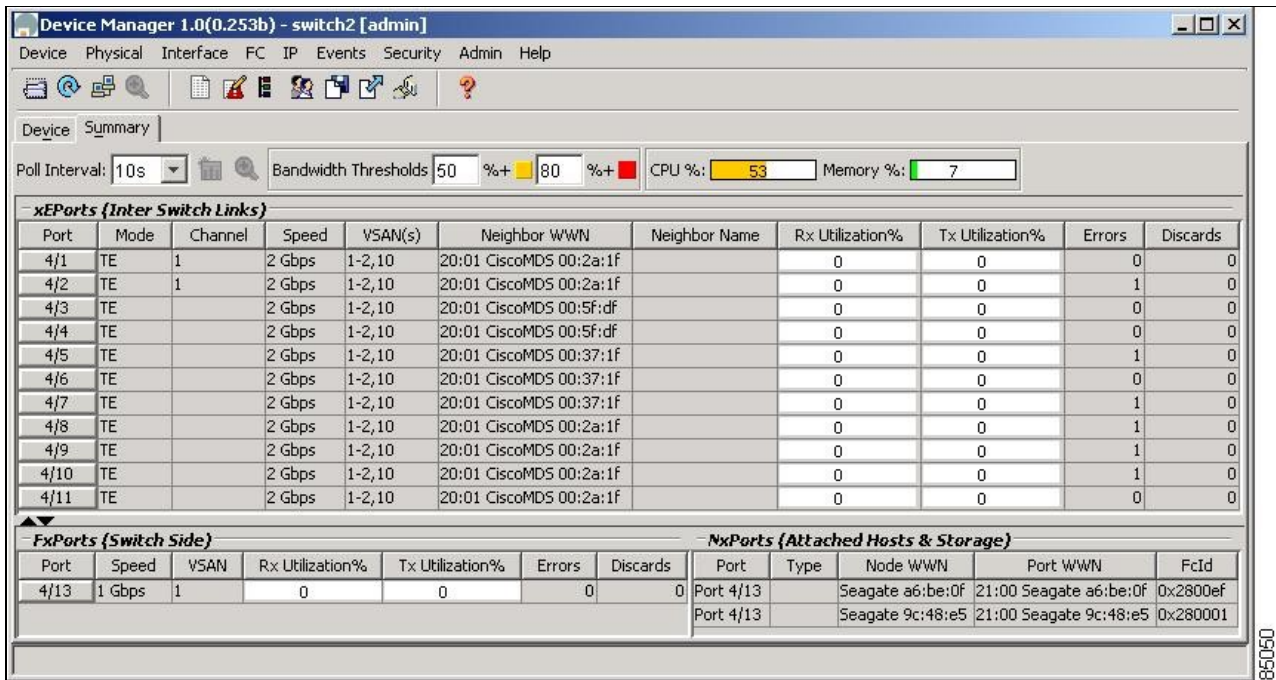


The Summary View window lets you analyze switch performance issues, diagnose problems, and change parameters to resolve problems or inconsistencies. This view shows aggregated statistics for the active supervisor module and all switch ports. Information is presented in tabular or graphical formats, with bar, line, area, and pie chart options. You can also use the Summary View to capture the current state of information for export to a file or output to a printer.

Analyzing Switch Device Health

Choose the **Switch Health** option from the Fabric Manager Tools menu to determine the status of the components of a specific switch.

Figure B-3 Switch Health Analysis Window

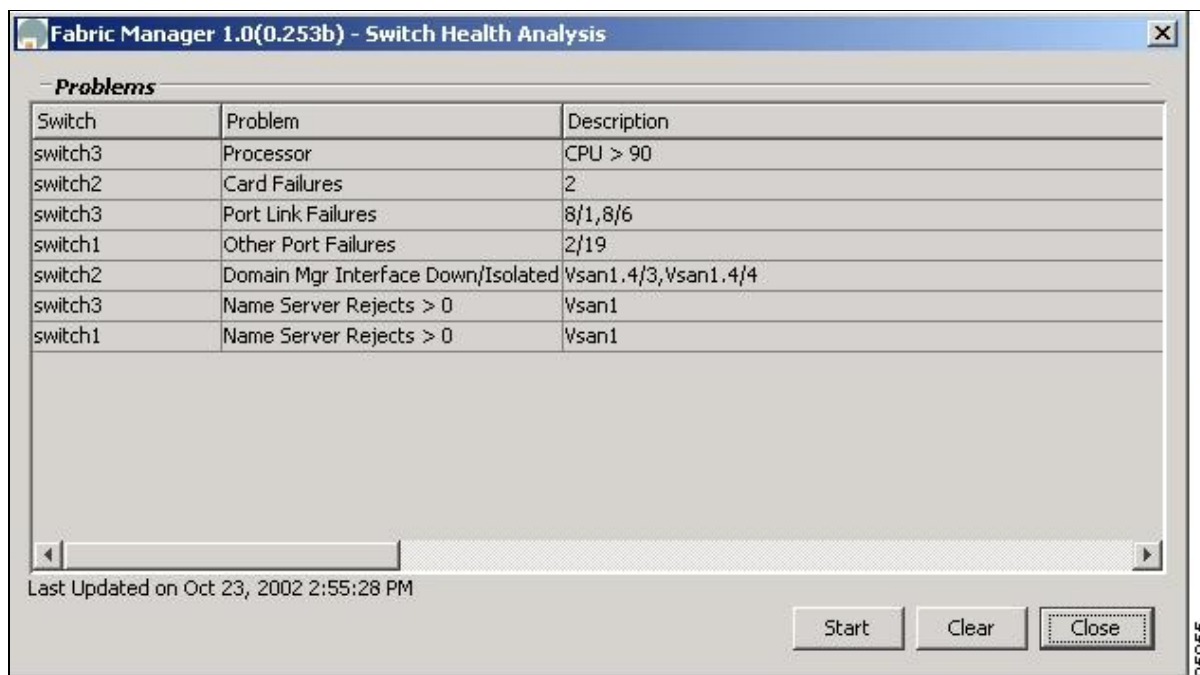

The Switch Health Analysis window displays any problems affecting the selected switches.

Analyzing End-to-End Connectivity

Select **Tools > End to End Connectivity** option from Fabric Manager to determine connectivity and routes among devices with the switch fabric. The connectivity tool checks to see that every pair of end devices in an active zone can talk to each other, using a Ping test and by determining if they are in the same VSAN. This option uses versions of the **ping** and **traceroute** commands modified for Fibre Channel networks.

The End to End Connectivity Analysis window displays the selected end points with the switch to which each is attached, and the source and target ports used to connect it.


The output shows all the requests which have failed. The possible descriptions are:

- Ignoring empty zone?No requests are issued for this zone.
- Ignoring zone with single member?No requests are issued for this zone.
- Source/Target are unknown?No nameserver entries exist for the ports or we have not discovered the port during discovery.
- Both devices are on the same switch?The devices are not redundantly connected.
- No paths exist.
- Only one unique path exists.
- VSAN does not have an active zone set.
- Average time... micro secs?The latency value was more than the threshold supplied.

Analyzing Switch Fabric Configuration

Select the **Fabric Configuration** option from the Fabric Manager Tools menu to analyze the configuration of a switch by comparing the current configuration to a specific switch or to a policy file. You can save a switch configuration to a file and then compare all switches against the configuration in the file.

Figure B-4 Fabric Configuration Analysis Window

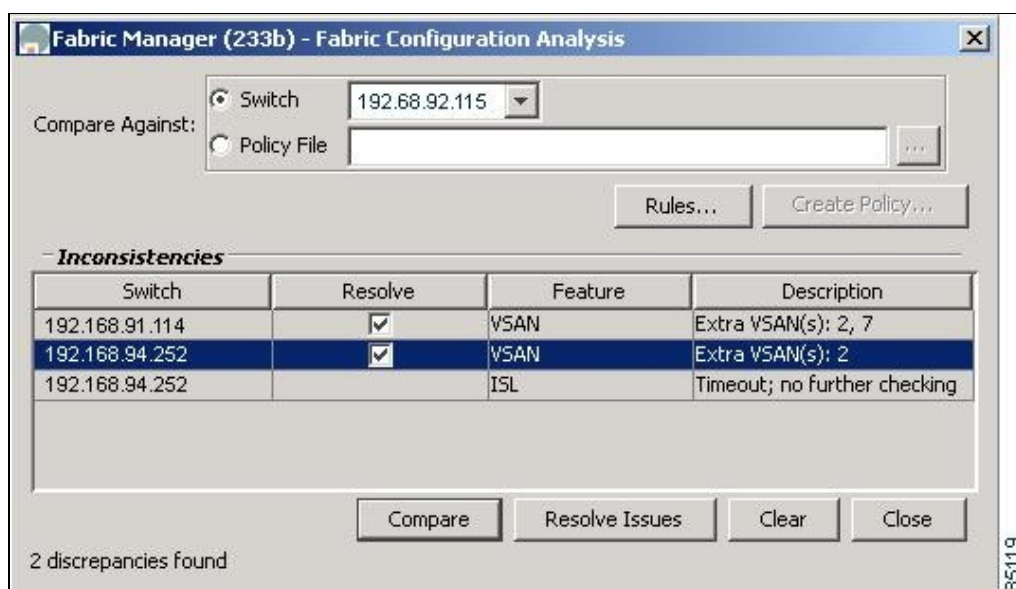


You use a policy file to define the rules to be applied when running the Fabric Checker. When you create a policy file, the system saves the rules selected for the selected switch.

Analyzing the Results of Merging Zones

Cisco Fabric Manager provides a very useful tool for troubleshooting problems that occur when merging zones configured on different switches.

Select the **Zone Merge** option on the Fabric Manager Tools menu to determine if two connected switches have compatible zone configurations.

Figure B-5 Zone Merge Analysis Window

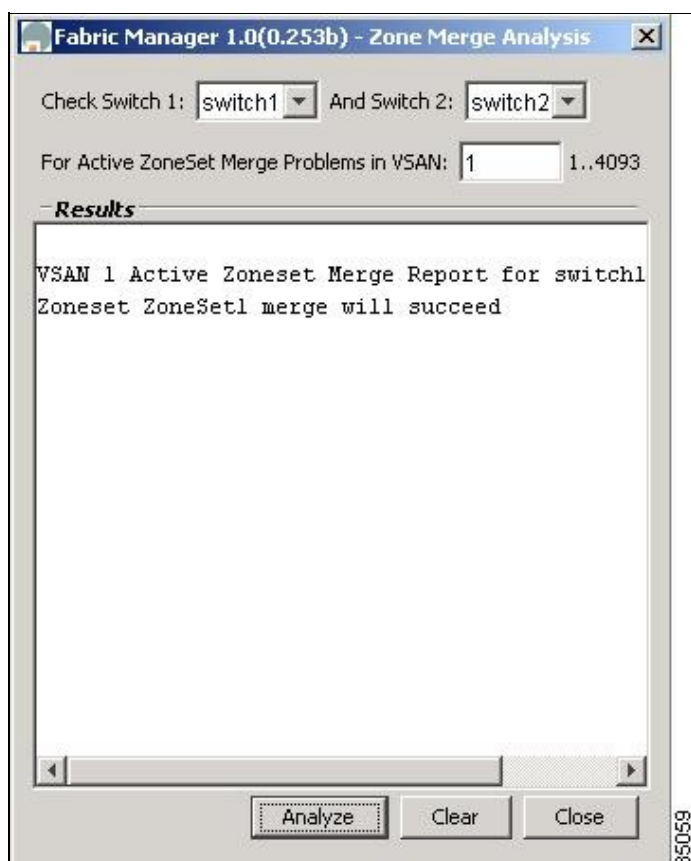

The Zone Merge Analysis window displays any inconsistencies between the zone configuration of the two selected switches.

You can use the following options on the Fabric Manager Tools menu to verify connectivity to a selected object or to open other management tools:

- Traceroute? Verify connectivity between two end devices that are currently selected on the Map pane.
- Device Manager? Launch Device Manager for the switch selected on the Map pane.
- Command Line Interface? Open a Telnet or SSH session for the switch selected on the Map pane.

Alerts and Alarms

You can configure and monitor SNMP, RMON, Syslog, and Call Home alarms and notifications using the different options on the Device Manager Events menu. SNMP provides a set of preconfigured traps and informs that are automatically generated and sent to the destinations (trap receivers) that you identify. The RMON Threshold Manager lets you configure thresholds for specific events that trigger log entries or notifications. You can use either Fabric Manager or Device Manager to identify Syslog servers that will record different events or to configure Call Home, which can alert you through e-mail messages or paging when specific events occur.

Device Manager: RMON Threshold Manager

Use the options on the Device Manager Events menu to configure and monitor Simple Network Management Protocol (SNMP), Remote Monitor (RMON), Syslog, and Call Home alarms and notifications. SNMP provides a set of preconfigured traps and informs that are automatically generated and sent to the destinations (trap receivers) chosen by the user.

Use the RMON Threshold Manager to configure event thresholds that will trigger log entries or notifications. Use either Fabric Manager or Device Manager to:

- Identify Syslog servers that will record events.
- Configure Call Home, which can issue alerts via e-mail messages or paging when specific events occur.

The RMON groups that have been adapted for use with Fibre Channel include the AlarmGroup and EventGroup. The AlarmGroup provides services to set alarms. Alarms can be set on one or multiple parameters within a device. For example, an RMON alarm can be set for a specific level of CPU utilization or crossbar utilization on a switch. The EventGroup allows configuration of events (actions to be taken) based on an alarm condition. Supported event types include logging, SNMP traps, and log-and-trap.

Figure B-6 RMON Threshold Manager



Fibre Channel Name Service

The Fibre Channel name service is a distributed service in which all connected devices participate. As new SCSI target devices attach to the fabric, they register themselves with the name service, which is then distributed among all participating fabric switches. This information can then be used to help determine the identity and topology of nodes connected to the fabric.

SCSI Target Discovery

The SCSI Target Discovery feature provides added insight into connected SCSI targets. This feature allows the switch to briefly log into connected SCSI target devices and issue a series of SCSI inquiry commands to help discover additional information. The additional information that is queried includes logical unit number (LUN) details including the number of LUNs, the LUN IDs, and the sizes of the LUNs.

This information is then compiled and made available to through CLI commands, through the Cisco Fabric Manager, and also via an embedded SNMP MIB which allows the information to be easily retrieved by an upstream management application. Using the SCSI Target Discovery feature, you can have a much more detailed view of the fabric and its connected SCSI devices.

The following is an example of output from the **discover scsi-target** command:

```
switch# discover scsi-target local remote
discovery started
switch# show scsi-target lun vsan 1
- ST318203FC from SEAGATE (Rev 0004)
```

FCID is 0xef02b5 in VSAN 1, PWWN is 21:00:00:20:37:46:78:97

LUN	Capacity (MB)	Status	Serial Number	Device-Id
-----	------------------	--------	---------------	-----------

0x0	18210	Online	LRA2510000007027	C:1 A:0 T:3 20:00:00:20:37:46:78:97
-----	-------	--------	------------------	-------------------------------------

- ST318203FC from SEAGATE (Rev 0004)

FCID is 0xef02b6 in VSAN 1, PWWN is 21:00:00:20:37:5b:cf:b9

LUN	Capacity (MB)	Status	Serial Number	Device-Id
-----	------------------	--------	---------------	-----------

0x0	18210	Online	LR94873000007029	C:1 A:0 T:3 20:00:00:20:37:5b:cf:b9
-----	-------	--------	------------------	-------------------------------------


- ST318203FC from SEAGATE (Rev 0004)

FCID is 0xef02b9 in VSAN 1, PWWN is 21:00:00:20:37:18:6f:90

LUN	Capacity (MB)	Status	Serial Number	Device-Id
-----	------------------	--------	---------------	-----------

0x0	18210	Online	LR18591800001004	C:1 A:0 T:3 20:00:00:20:37:18:6f:90
-----	-------	--------	------------------	-------------------------------------

For more information about SCSI target discovery, refer to the *Cisco MDS 9000 Family Configuration Guide*.


 **Note:** This tool can be effective to find out the number of LUNs exported by a storage subsystem, but it may be ineffective when LUN Zoning/LUN Security tools are used.

SNMP and RMON Support

The Cisco MDS 9000 Family switches provide extensive SNMPv1, v2, and v3 support, including Management Information Bases (MIBs) and notifications (traps and informs).

The applications provided by Cisco that use SNMP include Fabric Manager and CiscoWorks RME. Also, the SNMP standard allows any third-party applications that support the different MIBs to manage and monitor Cisco MDS 9000 Family switches.

SNMPv3 provides extended security. Each switch can be selectively enabled or disabled for SNMP service. In addition, each switch can be configured with a method of handling SNMPv1 and v2 requests.

 **Note:** During initial configuration of your switch, the system prompts you to define SNMP v1 or V2 community strings and to create a SNMP v3 username and password.

Cisco MDS 9000 Family switches support over 50 different MIBs, which can be divided into the following six categories:

- IETF Standards-based Entity MIBs (for example, RFC2736ENTITY-MIB)

These MIBs are used to report information on the physical devices themselves in terms of physical attributes etc.

- Cisco-Proprietary Entity MIBs (for example, CISCO-ENTITY-FRU-CONTROL-MIB)

These MIBs are used to report additional physical device information about Cisco-only devices such as their configuration.

- IETF IP Transport-oriented MIBs (for example, RFC20136UDP-MIB)

These MIBs are used to report transport-oriented statistics on such protocols as IP, TCP, and UDP. These transports are used in the management of the Cisco MDS 9000 Family through the OOB Ethernet interface on the supervisor module.

- Cisco-Proprietary Storage and Storage Network MIBs (for example, NAME-SERVER-MIB)

These MIBs were written by Cisco to help expose information that is discovered within a fabric to management applications not connected to the fabric itself. In addition to exposing configuration details for features like zoning and virtual SANs (VSANs) via MIBs, discovered information from sources like the FC-GS-3 Name Server can be pulled via a MIB. Additionally, MIBs are provided to configure/enable features within the Cisco MDS 9000 Family. There are over 20 new MIBs provided by Cisco for this information and configuration capability.

- IETF IP Storage Working Group MIBs (for example, ISCSI-MIB)

While many of these MIBs are still work-in-progress, Cisco is helping to draft such MIBs for protocols such as iSCSI and Fibre Channel-over-IP (FCIP) to be standardized within the IETF.

- Miscellaneous MIBs (for example, SNMP-FRAMEWORK-MIB)


There are several other MIBs provided in the Cisco MDS 9000 Family switches for tasks such as defining the SNMP framework or creating SNMP partitioned views.

These MIBs are used to report transport-oriented statistics on such protocols as IP, TCP, and UDP. These transports are used in the management of the Cisco MDS 9000 Family through the OOB Ethernet interface on the supervisor module.

You can use SNMPv3 to assign different SNMP capabilities to specific roles.

Cisco MDS 9000 Family switches also support Remote Monitoring (RMON) for Fibre Channel. RMON provides a standard method to monitor the basic operations of network protocols providing connectivity between SNMP management stations and monitoring agents. RMON also provides a powerful alarm and event mechanism for setting thresholds and sending notifications based on changes in network behavior.

The RMON groups that have been adapted for use with Fibre Channel include the *AlarmGroup* and the *EventGroup*. The *AlarmGroup* provides services to set alarms. Alarms can be set on one or multiple parameters within a device. For example, you can set an RMON alarm for a specific level of CPU utilization or crossbar utilization on a switch. The *EventGroup* lets you configure events that are actions to be taken based on an alarm condition. The types of events that are supported include *logging*, *SNMP traps*, and *log-and-trap*.

 **Note:** To configure events within an RMON group, use the **Events > Threshold Manager** option from Device Manager. See the "Device Manager: RMON Threshold Manager" section.

Using RADIUS

RADIUS is fully supported for the Cisco MDS 9000 Family switches through the Fabric Manager and the CLI. RADIUS is a protocol used for the exchange of attributes or credentials between a head-end RADIUS server and a client device. These attributes relate to three classes of services:

- Authentication

- Authorization
- Accounting


Authentication refers to the authentication of users for access to a specific device. You can use RADIUS to manage user accounts for access to Cisco MDS 9000 Family switches. When you try to log into a switch, the switch validates you with information from a central RADIUS server.

Authorization refers to the scope of access that you have once you have been authenticated. Assigned roles for users can be stored in a RADIUS server along with a list of actual devices that the user should have access to. Once the user has been authenticated, then switch can then refer to the RADIUS server to determine the extent of access the user will have within the switch network.

Accounting refers to the log information that is kept for each management session in a switch. This information may be used to generate reports for troubleshooting purposes and user accountability. Accounting can be implemented locally or remotely (using RADIUS).

The following is an example of an accounting log entries.

```
switch# show accounting log
Sun Dec 15 04:02:27 2002:start:/dev/pts/0_1039924947:admin
Sun Dec 15 04:02:28 2002:stop:/dev/pts/0_1039924947:admin:vsh exited normally
Sun Dec 15 04:02:33 2002:start:/dev/pts/0_1039924953:admin
Sun Dec 15 04:02:34 2002:stop:/dev/pts/0_1039924953:admin:vsh exited normally
Sun Dec 15 05:02:08 2002:start:snmp_1039928528_172.22.95.167:public
Sun Dec 15 05:02:08 2002:update:snmp_1039928528_172.22.95.167:public:Switchname
```

 **Note:** The accounting log only shows the beginning and ending (start and stop) for each session.

Using Syslog

The system message logging software saves messages in a log file or directs the messages to other devices. This feature provides the following capabilities:

- Logging information for monitoring and troubleshooting.
- Selection of the types of logging information to be captured.
- Selection of the destination of the captured logging information.

Syslog lets you store a chronological log of system messages locally or sent to a central Syslog server. Syslog messages can also be sent to the console for immediate use. These messages can vary in detail depending on the configuration that you choose.

Syslog messages are categorized into 7 severity levels from *debug* to *critical* events. You can limit the severity levels that are reported for specific services within the switch. For example, you may wish only to report *debug* events for the FSPF service but record all severity level events for the *Zoning* service.

A unique feature within the Cisco MDS 9000 Family switches is the ability to send RADIUS accounting records to the Syslog service. The advantage of this feature is that you can consolidate both types of messages for easier correlation. For example, when you log into a switch and change an FSPF parameter, Syslog and RADIUS provide complimentary information that will help you formulate a complete picture of the event.

Log messages are not saved across system reboots. However, a maximum of 100 log messages with a severity level of critical and below (levels 0, 1, and 2) are saved in NVRAM. You can view this log at any time with the **show logging nvram** command.

Logging Levels

MDS supports the following logging levels:

- 0-emergency
- 1-alert
- 2-critical
- 3-error
- 4-warning
- 5-notification
- 6-informational
- 7-debugging


By default, the switch logs normal but significant system messages to a log file and sends these messages to the system console. Users can specify which system messages should be saved based on the type of facility and the severity level. Messages are time-stamped to enhance real-time debugging and management.

Enabling Logging for Telnet or SSH

System logging messages are sent to the console based on the default or configured logging facility and severity values.

Users can disable logging to the console or enable logging to a given Telnet or SSH session.

- To disable console logging, use the **no logging console** command in CONFIG mode.
- To enable logging for telnet or SSH, use the **terminal monitor** command in EXEC mode.

 **Note:** When logging to a console session is disabled or enabled, that state is applied to all future console sessions. If a user exits and logs in again to a new session, the state is preserved. However, when logging to a Telnet or SSH session is enabled or disabled, that state is applied only to that session. The state is not preserved after the user exits the session.

The **no logging console** command shown in Example B-7]:

- Disables console logging
- Enabled by default

Example B-7 no logging console Command

```
switch(config)# no logging console
```

The **terminal monitor** command shown in Example B-8:

- Enables logging for telnet or SSH

Disabled by default

Example B-8 terminal monitor Command

```
switch# terminal monitor
```

Using Fibre Channel SPAN

You can use the Switched Port Analyzer (SPAN) utility to perform detailed troubleshooting or to take a sample of traffic from a particular application host for proactive monitoring and analysis. This utility is most helpful when you have a Fibre Channel protocol analyzer available and you are monitoring user traffic between two FC IDs.

When you have a problem in your storage network that you cannot solve by fixing the device configuration, you typically need to take a look at the protocol level. You can use debug commands to look at the control traffic between an end node and a switch. However, when you need to focus on all the traffic originating from or destined to a particular end node such as a host or a disk, you can use a protocol analyzer to capture protocol traces.

To use a protocol analyzer, you must insert the analyzer in-line with the device under analysis, which disrupts input and output (I/O) to and from the device. This problem is worse when the point of analysis is on an Inter-Switch Link (ISL) link between two switches. In this case, the disruption may be significant depending on what devices are downstream from the severed ISL link.

In Ethernet networks, this problem can be solved using the SPAN utility, which is provided with the Cisco Catalyst Family of Ethernet switches. SPAN has also been implemented with the Cisco MDS 9000 Family switches for use in Fibre Channel networks. SPAN lets you take a *copy* of all traffic and direct it to another port within the switch. The process is non disruptive to any connected devices and is facilitated in hardware, which prevents any unnecessary CPU load. Using Fibre Channel SPAN, you can connect a Fibre Channel analyzer, such as a Finisar analyzer, to an unused port on the switch and then SPAN a copy of the traffic from a port under analysis to the analyzer in a non disruptive fashion.

SPAN allows you to create up to 16 independent SPAN sessions within the switch. Each session can have up to four unique sources and one destination port. In addition, you can apply a filter to capture only the traffic received or the traffic transmitted. With Fibre Channel SPAN, you can even capture traffic from a particular Virtual SAN (VSAN).

To start the SPAN utility use the CLI command **span session** *session_num*, where *session_num* identifies a specific SPAN session. When you enter this command, the system displays a submenu, which lets you configure the destination interface and the source VSAN or interfaces.

```
switch2# config terminal
switch2(config)# span session 1 <<=== Create a span session
switch2(config-span)# source interface fc1/8 <<=== Specify the port to be spanned
switch2(config-span)# destination interface fc1/3 <<==== Specify the span destination port
switch2(config-span)# end

switch2# show span session 1
Session 1 (active)
  Destination is fc1/1
  No session filters configured
  Ingress (rx) sources are
    fc1/8,
  Egress (tx) sources are
    fc1/8,
```

For more information about configuring SPAN, refer to the *Cisco MDS 9000 Family Configuration Guide*.

Using Cisco Network Management Products

This section describes network management tools that are available from Cisco and are useful for troubleshooting problems with Cisco MDS 9000 Family switches and connected devices and includes the following topics:


- Cisco MDS 9000 Family Port Analyzer Adapter
- Cisco Fabric Analyzer
- IP Network Simulator

Cisco MDS 9000 Family Port Analyzer Adapter

The Cisco MDS 9000 Family Port Analyzer Adapter is a stand alone adapter card that converts Fibre Channel frames to Ethernet frames by encapsulating each Fibre Channel frame into an Ethernet frame. This product is meant to be used for analyzing SPAN traffic from a Fibre channel port on a Cisco MDS 9000 Family switch.

The Cisco MDS 9000 Family Port Analyzer Adapter provides two physical interfaces:

- A Fiber Channel interface that connects to the SPAN port of a Cisco MDS 9000 Family switch
- A 100/1000 Mb/s Ethernet port that forwards the encapsulated Fibre Channel traffic with a broadcast destination MAC address

 **Note:** The Cisco MDS 9000 Family Port Analyzer Adapter does not support half-duplex mode and for this reason, it will not work when connected to a hub.

The Cisco MDS 9000 Family Port Analyzer Adapter provides the following features:

- Encapsulates Fibre Channel frames into Ethernet frames.
- Sustains 32 maximum size Fibre Channel frames burst (in 100 Mbps mode).
- Line rate at 1Gbps (for Fibre Channel frames larger than 91 bytes).
- 64 KB of onboard frame buffer.
- Configurable option for Truncating Fibre Channel frames to 256 bytes (for greater burst).
- Configurable option for Deep Truncating Fibre Channel frames to 64 bytes (best frames burst).
- Configurable option for Ethernet Truncating Fibre Channel frames to 1496 bytes (maximum size E-net frames).
- Configurable option for No Truncate Mode (sends jumbo frames on E-net side).
- Packet Counter (Indicates number of previous packet drops).
- SOF/EOF type information embedded.
- 100/1000 Mb/s Ethernet interface (option on board).
- Auto Configuration on power up.
- Fibre Channel and Ethernet Link up indicator LEDs.
- Checks Fibre Channel frame CRC.

When used in conjunction with the open source protocol analyzer, Ethereal (<http://www.ethereal.com>), the Cisco MDS 9000 Family Port Analyzer Adapter provides a cost-effective and powerful troubleshooting tool. It allows any PC with a Ethernet card to provide the functionality of a flexible Fibre Channel analyzer. For more information on using the Cisco MDS 9000 Family Port Analyzer Adapter see the *Cisco MDS 9000 Family Port Analyzer Adapter Installation and Configuration Guide*.

Cisco Fabric Analyzer

The ultimate tool for troubleshooting network protocol problems is the protocol analyzer. Protocol analyzers promiscuously capture network traffic and completely decode the captured frames down to the protocol level. Using a protocol analyzer, you can conduct a detailed analysis by taking a sample of a storage network transaction and by mapping the transaction on a frame-by-frame basis, complete with timestamps. This kind of information lets you pinpoint a problem with a high degree of accuracy and arrive at a solution more quickly. However, dedicated protocol analyzers are expensive and they must be placed locally at the point of analysis within the network.

With the Cisco Fabric Analyzer, Cisco has brought Fibre Channel protocol analysis within a storage network to a new level of capability. Using Cisco Fabric Analyzer, you can capture Fibre Channel control traffic from a switch and decode it without having to disrupt any connectivity, and without having to be present locally at the point of analysis.

The Cisco Fabric Analyzer consists of three main components:

- An agent embedded in the Cisco MDS 9000 Family switches. This agent can be selectively enabled to promiscuously capture designated control traffic.
- A text-based interface to the control and decoded output of the analyzer.
- GUI-based client application that you can install on any workstation to provide a full-function interface to the decoded data.

The text-based interface to the Cisco Fabric Analyzer is a CLI-based program for controlling the analyzer and providing output of the decoded results. Using the CLI, you can remotely access an Cisco MDS 9000 Family switch, using Telnet or a secure method such as Secure Shell (SSH). You can then capture and decode Fibre Channel control traffic, which offers a convenient method for conducting detailed, remote troubleshooting. In addition, because this tool is CLI-based, you can use roles-based policies to limit access to this tool as required.

The GUI-based implementation (Ethereal) can be installed on any Windows or Linux workstation. This application provides an easier-to-use interface that is more easily customizable. The GUI interface lets you easily sort, filter, crop, and save traces to your local workstation.

The Ethereal application allows remote access to Fibre Channel control traffic and does not require a Fibre Channel connection on the remote workstation.

The Cisco Fabric Analyzer lets you capture and decode Fibre Channel traffic remotely over Ethernet. It captures Fibre Channel traffic, encapsulates it in TCP/IP, and transports it over an Ethernet network to the remote client. The remote client then deencapsulates and fully decodes the Fibre Channel frames. This capability provides flexibility for troubleshooting problems in remote locations.

The Cisco Fabric Analyzer captures and analyzes control traffic coming to the Supervisor Card. This tool is much more effective than the debug facility for packet trace and traffic analysis, because it is not very CPU intensive and it provides a graphic interface for easy analysis and decoding of the captured traffic.

```
switch# config terminal
switch(config)# fcanalyzer local brief
Capturing on eth2
0.000000 ff.ff.fd -> ff.ff.fd SW_ILS 1 0x59b7 0xffff 0x7 -> 0xf HLO
0.000089 ff.ff.fd -> ff.ff.fd FC 1 0x59b7 0x59c9 0xff -> 0x0 Link Ctl, ACK1
1.991615 ff.ff.fd -> ff.ff.fd SW_ILS 1 0x59ca 0xffff 0xff -> 0x0 HLO
1.992024 ff.ff.fd -> ff.ff.fd FC 1 0x59ca 0x59b8 0x7 -> 0xf Link Ctl, ACK1
fcanalyzer example of fully decoded frame.
```

Cisco_MDS_SanOS_Troubleshooting_Guide_--_Troubleshooting_Tools_and_Methodology

```
switch2(config)# fcanalyzer local
Capturing on eth2
Frame 1 (96 bytes on wire, 96 bytes captured)
  Arrival Time Jan 13, 2003 135038.787671000
  Time delta from previous packet 0.000000000 seconds
  Time relative to first packet 0.000000000 seconds
  Frame Number 1
  Packet Length 96 bytes
  Capture Length 96 bytes
Ethernet II, Src 000000000000a, Dst 00000000ee00
  Destination 00000000ee00 (00000000ee00)
  Source 000000000000a (000000000000a)
  Type Vegas FC Frame Transport (0xfcfc)
MDS Header(SOFf/EOFn)
  MDS Header
    Packet Len 66
    .... 0000 0001 11.. = Dst Index 0x0007
    .... ..00 1111 1111 = Src Index 0x00ff
    .... 0000 0000 0001 = VSAN 1
  MDS Trailer
    EOF EOFn (3)
Fibre Channel
  R_CTL 0x02
  Dest Addr ff.fc.7e
  CS_CTL 0x00
  Src Addr ff.fc.7f
  Type SW_ILS (0x22)
  F_CTL 0x290000 (Exchange Originator, Seq Initiator, Exchg First, Seq Last,
CS_CTL, Transfer Seq Initiative, Last Data Frame - No Info, ABTS - Abort/MS, )
  SEQ_ID 0x11
  DF_CTL 0x00
  SEQ_CNT 0
  OX_ID 0x5a06
  RX_ID 0x0000
  Parameter 0x00000000
SW_ILS
  Cmd Code SW_RSCN (0x1b)
  0010 .... = Event Type Port is offline (2)
  .... 0000 = Address Format Port Addr Format (0)
  Affected Port ID 7f.00.01
  Detection Function Fabric Detected (0x00000001)
  Num Entries 1
  Device Entry 0
  Port State 0x20
  Port Id 7f.00.01
  Port WWN 1000000530005f1f (000530)
  Node WWN 1000000530005f1f (000530)
```

However, the Cisco Fabric Analyzer is not the right tool for troubleshooting end-to-end problems because it cannot access any traffic between the server and storage subsystems. That traffic is switched locally on the linecards, and does not reach the Supervisor card. In order to debug issues related to the communication between server and storage subsystems, you need to use Fibre Channel SPAN with an external protocol analyzer.

There are two ways you can start the Cisco Fabric Analyzer from the CLI.

- **fcanalyzer local**?-Launches the text-based version on the analyzer directly on the console screen or on a file local to the system.
- **fcanalyzer remote ip address**?-Activates the remote capture agent on the switch, where ip address is the address of the management station running Ethereal.

For more information about using the Cisco Fabric Analyzer, refer to the *Cisco MDS 9000 Family Configuration Guide*.

IP Network Simulator

Network simulators let you simulate various kinds of IP data network conditions. A simulator allows you to troubleshoot IP network problems, and can also help you understand the potential impact of additional traffic or specific network conditions to your existing network configuration.

Network simulator is a generic tool that provides simulation features for all Ethernet traffic, and handles full duplex Gigabit Ethernet traffic at full line rate. It is supported on the 8-port IP Storage Services (IPS-8) module and on the 4-port IP Storage Services (IPS-4) module only. It requires the SAN Extension Tuner, which is available in either the SAN extension over IP package for IPS-8 modules (SAN_EXTN_OVER_IP) or the SAN extension over IP package for IPS-4 modules (SAN_EXTN_OVER_IP_IPS4).

The network simulator tool can simulate the following network functions:

- Network delays (maximum network delays of 150 ms)
- Limiting maximum throughput to the given bandwidth
- Finite queue size
- Dropping packets
- Reordering packets

For more information about using the IP Network Simulator, refer to the *Cisco MDS 9000 Family CLI Configuration Guide*.

Using Other Troubleshooting Products

This section describes products from other vendors that you might find useful when troubleshooting problems with your storage network and connected devices. It includes the following topics:

- Fibre Channel Testers
- Fibre Channel Protocol Analyzers

Fibre Channel Testers

Fibre Channel testers are generally used to troubleshoot low-level protocol functions (such as Link Initialization). Usually these devices operate at 1- or 2-Gbps and provide the capability to create customized low-level Fibre Channel primitive sequences.

Fibre Channel testers are primarily used to ensure physical connectivity and low-level protocol compatibility, such as with different operative modes like Point-to-Point or Loop mode.

Fibre Channel testers and more generalized optical testers may used to spot broken cables, speed mismatch, link initialization problems and transmission errors. These devices sometimes incorporate higher-level protocol analysis tools and may bundled with generic protocol analyzers.

Fibre Channel Protocol Analyzers

An external protocol analyzer (for example, from Finisar), can capture and decode link-level issues and Fibre Channel ordered sets that comprise the Fibre Channel frame. The Cisco MDS 9000 Family Port Analyzer

Adapter, does not capture and decode at the ordered set level.

A Fibre Channel protocol analyzer captures transmitted information from the physical layer of the Fibre Channel network. Because these devices are physically located on the network instead of at a software reassembly layer like most Ethernet analyzers, Fibre Channel protocol analyzers can monitor data from the 8b/10b level all the way to the embedded upper-layer protocols.

Fibre Channel network devices (HBAs, switches, and storage subsystems) are not able to monitor many SAN behavior patterns. Also, management tools that gather data from these devices are not necessarily aware of problems occurring at the Fibre Channel physical, framing, or SCSI upper layers for a number of reasons.

Fibre Channel devices are specialized for handling and distributing incoming and outgoing data streams. When devices are under maximum loads, which is when problems often occur, the device resources available for error reporting are typically at a minimum and are frequently inadequate for accurate error tracking. Also, Fibre Channel host bus adapters (HBAs) do not provide the ability to capture raw network data.

For these reasons, a protocol analyzer may be more important in troubleshooting a storage network than in a typical Ethernet network. There are a number of common SAN problems that occur in deployed systems and test environments that are visible only with a Fibre Channel analyzer. These include the following:

- Credit starvation
- Missing, malformed, or non-standard-compliant frames or primitives
- Protocol errors

Using Host Diagnostic Tools

Most host systems provide utilities or other tools that you can use for troubleshooting the connection to the allocated storage. For example, on a Windows system, you can use the Diskmon or Disk Management tool to verify accessibility of the storage and to perform some basic monitoring and administrative tasks on the visible volumes.

Alternatively, you can use Iometer, an I/O subsystem measurement and characterization tool, to generate a simulated load and measure performance. Iometer is a public domain software utility for Windows, originally written by Intel, that provides correlation functionality to assist with performance analysis.

Iometer measures the end-to-end performance of a SAN without cache hits. This can be an important measurement because if write or read requests go to the cache on the controller (a cache hit) rather than to the disk subsystems, performance metrics will be artificially high. You can obtain Iometer from SourceForge.net at the following URL:

<http://sourceforge.net/projects/iometer/>

Iometer is not the only I/O generator you can use to simulate traffic through the SAN fabric. Other popular I/O generators and benchmark tools used for SAN testing include Iozone and Postmark. Iozone is a file system benchmark tool that generates and measures a variety of file operations. It has been ported to many systems and is useful for performing a broad range of file system tests and analysis.

Postmark was designed to create a large pool of continually changing files, which simulates the transaction rates of a large Internet mail server.

PostMark generates an initial pool of random text files in a configurable range of sizes. Creation of the pool produces statistics on continuous small file creation performance. Once the pool is created, PostMark generates a specified number of transactions, each of which consists of a pair of smaller transactions:

- Create file or delete file
- Read file or append file

Benchmarking tools offer a variety of capabilities and you should select the one that provides the best I/O characteristics of your application environment.

Utilities provided by the Sun Solaris operating system let you determine if the remote storage has been recognized and exported to you in form of a raw device or mounted file system, and to issue some basic queries and tests to the storage. You can measure performance and generate loads using the **iostat** utility, the **perfmeter** GUI utility, the **dd** utility, or a third-party utility like Extreme SCSI.

Every UNIX version provides similar utilities, but this guide only provides examples for Solaris. Refer to the documentation for your specific operating system for details.

Back to Main Page: [Cisco MDS SAN-OS Troubleshooting Guide](#)
