

This chapter describes how to configure link aggregation for the ML-Series cards, both EtherChannel and packet-over-SONET/SDH (POS) channel. For additional information about the Cisco IOS commands used in this chapter, refer to the *Cisco IOS Command Reference* publication.

This chapter contains the following major sections:

- [Understanding Link Aggregation](#)
- [Understanding Encapsulation over EtherChannel or POS Channel](#)
- [Monitoring and Verifying EtherChannel and POS](#)
- [Understanding Link Aggregation Control Protocol](#)

Contents

- [1 Understanding Link Aggregation](#)
 - ◆ [1.1 Configuring EtherChannel](#)
 - ◆ [1.2 EtherChannel Configuration Example](#)
 - ◇ [1.2.1 Figure 10-1: EtherChannel Example](#)
 - ◇ [1.2.2 Example 10-1: Switch A Configuration](#)
 - ◇ [1.2.3 Example 10-2: Switch B Configuration](#)
 - ◆ [1.3 Configuring POS Channel](#)
 - ◆ [1.4 POS Channel Configuration Example](#)
 - ◇ [1.4.1 Figure 10-2: POS Channel Example](#)
 - ◇ [1.4.2 Example 10-3: Switch A Configuration](#)
 - ◇ [1.4.3 Example 10-4: Switch B Configuration](#)
- [2 Understanding Encapsulation over EtherChannel or POS Channel](#)
 - ◆ [2.1 Configuring Encapsulation over EtherChannel or POS Channel](#)
 - ◆ [2.2 Encapsulation over EtherChannel Example](#)
 - ◇ [2.2.1 Figure 10-3: Encapsulation over EtherChannel Example](#)
 - ◇ [2.2.2 Example 10-5: Switch A Configuration](#)
 - ◇ [2.2.3 Example 10-6: Switch B Configuration](#)
- [3 Monitoring and Verifying EtherChannel and POS](#)
 - ◆ [3.1 Example 10-7: show interfaces port-channel Command](#)
- [4 Understanding Link Aggregation Control Protocol](#)
 - ◆ [4.1 Passive Mode and Active Mode](#)
 - ◆ [4.2 LACP Functions](#)
 - ◆ [4.3 LACP Parameters](#)
 - ◆ [4.4 LACP Usage Scenarios](#)
 - ◇ [4.4.1 Termination Mode](#)
 - [4.4.1.1 Figure 10-4: LACP Termination Mode Example](#)
 - ◇ [4.4.2 Transparent Mode](#)
 - [4.4.2.1 Figure 10-5: LACP Transparent Mode Example](#)
 - ◆ [4.5 Configuring LACP](#)

◇ 4.5.1 Example 10-8: LACP Configuration
Example

Understanding Link Aggregation

The ML-Series card offers both EtherChannel and POS channel. Traditionally EtherChannel is a trunking technology that groups together multiple full-duplex IEEE 802.3 Ethernet interfaces to provide fault-tolerant high-speed links between switches, routers, and servers. EtherChannel forms a single higher bandwidth routing or bridging endpoint and was designed primarily for host-to-switch connectivity. The ML-Series card extends this link aggregation technology to bridged POS interfaces. POS channel is only supported with LEX encapsulation.

Link aggregation provides the following benefits:

- Logical aggregation of bandwidth
- Load balancing
- Fault tolerance

Port channel is a term for both POS channel and EtherChannel. The port channel interface is treated as a single logical interface although it consists of multiple interfaces. Each port channel interface consists of one type of interface, either Fast Ethernet, Gigabit Ethernet, or POS. You must perform all port channel configurations on the port channel (EtherChannel or POS channel) interface rather than on the individual member Ethernet or POS interfaces. You can create the port channel interface by entering the **interface port-channel** interface configuration command.

Note: You must perform all IOS configurations—such as bridging, routing, or parameter changes such as an MTU change—on the port channel (EtherChannel or POS channel) interface rather than on individual member Ethernet or POS interfaces.

Port channel connections are fully compatible with IEEE 802.1Q trunking and routing technologies. IEEE 802.1Q trunking can carry multiple VLANs across a port channel.

Each ML100T-12, ML100X-8, or ML1000-2 card supports one POS channel, a port channel made up of the two POS ports. A POS channel combines the two POS port capacities into a maximum aggregate capacity of STS-48c or VC4-16c.

Each ML100T-12 supports up to six FECs and one POS channel. Each ML100X-8 supports up to four FECs and one POS channel. A maximum of four Fast Ethernet ports can bundle into one Fast Ethernet Channel (FEC) and provide bandwidth scalability up to 400-Mbps full-duplex Fast Ethernet.

Each ML1000-2 supports up to two port channels, including the POS channel. A maximum of two Gigabit Ethernet ports can bundle into one Gigabit Ethernet Channel (FEC) and provide 2-Gbps full-duplex aggregate capacity on the ML1000-2.

Caution! The EtherChannel interface is the Layer 2/Layer 3 interface. Do not enable Layer 3 addresses on the physical interfaces. Do not assign bridge groups on the physical interfaces because doing so creates loops.

Caution! Before a physical interface is removed from an EtherChannel (port channel) interface, the physical interface must be disabled. To disable a physical interface, use the shutdown command in interface configuration mode.

Note: Link aggregation across multiple ML-Series cards is not supported.

Note: Policing is not supported on port channel interfaces.

Note: The ML-Series does not support the routing of Subnetwork Access Protocol (SNAP) or Inter-Switch Link (ISL) encapsulated frames.

Configuring EtherChannel

You can configure an FEC or a GEC by creating an EtherChannel interface (port channel) and assigning a network IP address. All interfaces that are members of a FEC or a GEC should have the same link parameters, such as duplex and speed.

To create an EtherChannel interface, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# interface port-channel <i>channel-number</i>	Creates the EtherChannel interface. You can configure up to 6 FECs on the ML100T-12, 4 FECs on the ML100X-8, and 1 GEC on the ML1000-2.
2	Router(config-if)# ip address <i>ip-address subnet-mask</i>	Assigns an IP address and subnet mask to the EtherChannel interface (required only for Layer 3 EtherChannel).
3	Router(config-if)# end	Exits to privileged EXEC mode.
4	Router# copy running-config startup-config	(Optional) Saves configuration changes to NVRAM.

For information on other configuration tasks for the EtherChannel, refer to the *Cisco IOS Configuration Fundamentals Configuration Guide*.


To assign Ethernet interfaces to the EtherChannel, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# interface fastethernet <i>number</i> or Router(config)# interface gigabitethernet <i>number</i>	Enters one of the interface configuration modes to configure the Fast Ethernet or Gigabit Ethernet interface that you want to assign to the EtherChannel. You can assign any Ethernet interface on the system to the EtherChannel, but both interfaces must be either FEC or GEC.
2	Router(config-if)# channel-group <i>channel-number</i>	Assigns the Fast Ethernet or Gigabit Ethernet interfaces to the EtherChannel. The channel number must be the same channel number you assigned to the EtherChannel interface.
3	Router(config-if)# end	Exits to privileged EXEC mode.
4	Router# copy running-config startup-config	(Optional) Saves configuration changes to NVRAM.

EtherChannel Configuration Example

Figure 10-1 shows an example of EtherChannel. The associated commands are provided in [Example 10-1](#) (Switch A) and [Example 10-2](#) (Switch B).

Figure 10-1: EtherChannel Example

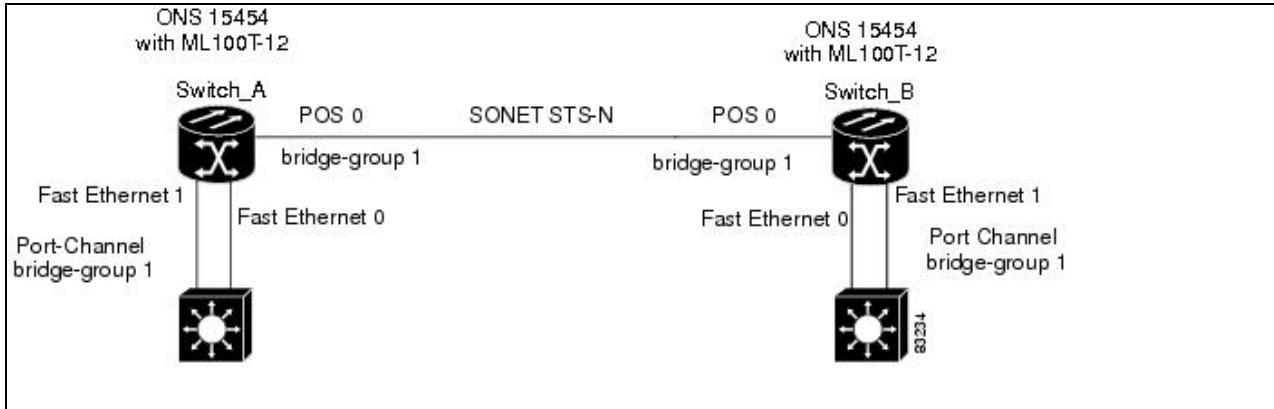

Example 10-1: Switch A Configuration

```
hostname Switch A
!
bridge 1 protocol ieee
!
interface Port-channel 1
 no ip address
 bridge-group 1
 hold-queue 150 in
!
interface FastEthernet 0
 no ip address
 channel-group 1
!
interface FastEthernet 1
 no ip address
 channel-group 1
!
interface POS 0
 no ip routing
 no ip address
 crc 32
 bridge-group 1
 pos flag c2 1
```

Example 10-2: Switch B Configuration

```
hostname Switch B
!
bridge 1 protocol ieee
!
interface Port-channel 1
 no ip routing
 no ip address
 bridge-group 1
```

```

hold-queue 150 in
!
interface FastEthernet 0
no ip address
channel-group 1
!
interface FastEthernet 1
no ip address
channel-group 1
!
interface POS 0
no ip address
crc 32
bridge-group 1
pos flag c2 1
!

```

Configuring POS Channel

You can configure a POS channel by creating a POS channel interface (port channel) and optionally assigning an IP address. All POS interfaces that are members of a POS channel should have the same port properties and be on the same ML-Series card.

Note: POS channel is only supported with LEX encapsulation.

To create a POS channel interface, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# interface port-channel <i>channel-number</i>	Creates the POS channel interface. You can configure one POS channel on the ML-Series card.
2	Router(config-if)# ip address <i>ip-address subnet-mask</i>	Assigns an IP address and subnet mask to the POS channel interface (required only for the Layer 3 POS channel).
3	Router(config-if)# end	Exits to privileged EXEC mode.
4	Router# copy running-config startup-config	(Optional) Saves configuration changes to NVRAM.

Caution! The POS channel interface is the routed interface. Do not enable Layer 3 addresses on any physical interfaces. Do not assign bridge groups on any physical interfaces because doing so creates loops.


To assign POS interfaces to the POS channel, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# interface pos <i>number</i>	Enters the interface configuration mode to configure the POS interface that you want to assign to the POS channel.
2	Router(config-if)# channel-group <i>channel-number</i>	Assigns the POS interface to the POS channel. The channel number must be the same channel number that you assigned to the POS channel interface.
3	Router(config-if)# end	Exits to privileged EXEC mode.
4	Router# copy running-config startup-config	(Optional) Saves the configuration changes to NVRAM.

POS Channel Configuration Example

Figure 10-2 shows an example of POS channel configuration. The associated code is provided in [Example 10-3](#) (Switch A) and [Example 10-4](#) (Switch B).

Figure 10-2: POS Channel Example

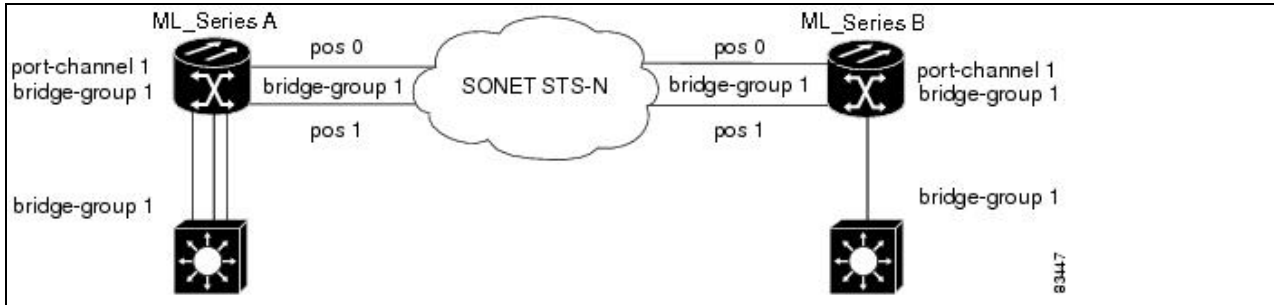

Example 10-3: Switch A Configuration

```
bridge irb
bridge 1 protocol ieee
!
!
interface Port-channell
no ip address
no keepalive
bridge-group 1
!
interface FastEthernet0
no ip address
bridge-group 1
!
interface POS0
no ip address
channel-group 1
crc 32
pos flag c2 1
!
interface POS1
no ip address
channel-group 1
crc 32
pos flag c2 1
```

Example 10-4: Switch B Configuration

```
bridge irb
bridge 1 protocol ieee
!
!
interface Port-channell
no ip address
no keepalive
bridge-group 1
!
interface FastEthernet0
no ip address
bridge-group 1
!
```

```
interface POS0
  no ip address
  channel-group 1
  crc 32
pos flag c2 1
!
interface POS1
  no ip address
  channel-group 1
  crc 32
pos flag c2 1
```

Understanding Encapsulation over EtherChannel or POS Channel

When configuring encapsulation over FEC, GEC, or POS, be sure to configure IEEE 802.1Q on the port-channel interface, not its member ports. However, certain attributes of port channel, such as duplex mode, need to be configured at the member port levels. Also make sure that you do not apply protocol-level configuration (such as an IP address or a bridge group assignment) to the member interfaces. All protocol-level configuration should be on the port channel or on its subinterface. You must configure IEEE 802.1Q encapsulation on the partner system of the EtherChannel as well.

Configuring Encapsulation over EtherChannel or POS Channel


To configure encapsulation over the EtherChannel or POS channel, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# interface port-channel channel-number.subinterface-number	Configures the subinterface on the created port channel.
2	Router(config-subif)# encapsulation dot1q vlan-id	Assigns the IEEE 802.1Q encapsulation to the subinterface.
3	Router(config-subif)# bridge-group bridge-group-number	Assigns the subinterface to a bridge group.
4	Router(config-subif)# end	Exits to privileged EXEC mode. Note: Optionally, you can remain in interface configuration mode and enable other supported interface commands to meet your requirements.
5	Router# copy running-config startup-config	(Optional) Saves the configuration changes to NVRAM.

Encapsulation over EtherChannel Example

Figure 10-3 shows an example of encapsulation over EtherChannel. The associated code is provided in Example 10-5 (Switch A) and Example 10-6 (Switch B).

Figure 10-3: Encapsulation over EtherChannel Example

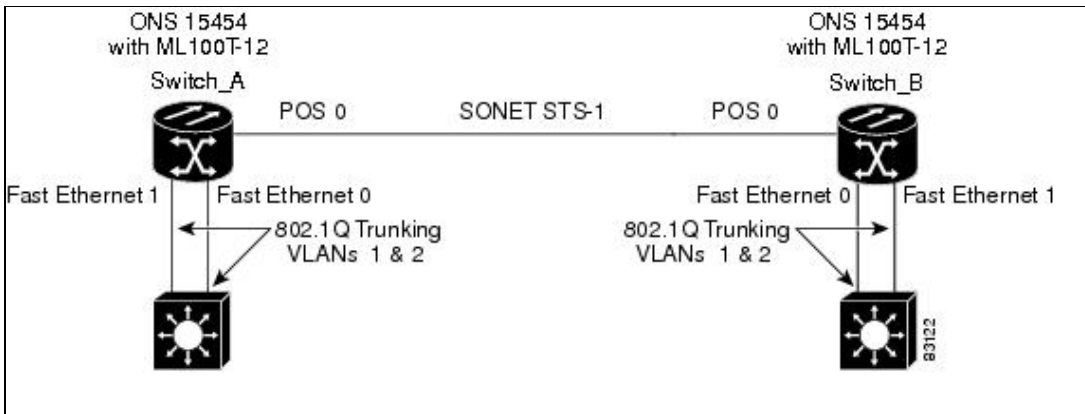

This encapsulation over EtherChannel example shows how to set up two ONS 15454s with ML100T-12 cards (Switch A and Switch B) to interoperate with two switches that also support IEEE 802.1Q encapsulation over EtherChannel. To set up this example, use the configurations in the following sections for both Switch A and Switch B.

Example 10-5: Switch A Configuration

```
hostname Switch A
!
bridge irb
bridge 1 protocol ieee
bridge 2 protocol ieee
!
interface Port-channel1
no ip address
hold-queue 150 in
!
interface Port-channel1.1
encapsulation dot1Q 1 native
bridge-group 1
!
interface Port-channel1.2
encapsulation dot1Q 2
bridge-group 2
!
interface FastEthernet0
no ip address
channel-group 1
!
interface FastEthernet1
no ip address
channel-group 1
!
interface POS0
no ip address
crc 32
pos flag c2 1
!
interface POS0.1
encapsulation dot1Q 1 native
bridge-group 1
!
interface POS0.2
encapsulation dot1Q 2
bridge-group 2
```

Figure 10-3: Encapsulation over EtherChannel Example

Example 10-6: Switch B Configuration

```

hostname Switch B
!
bridge irb
bridge 1 protocol ieee
bridge 2 protocol ieee
!
interface Port-channel1
  no ip address
  hold-queue 150 in
!
interface Port-channel1.1
  encapsulation dot1Q 1 native
bridge-group 1
!
interface Port-channel1.2
  encapsulation dot1Q 2
bridge-group 2
!
interface FastEthernet0
  no ip address
  channel-group 1
!
interface FastEthernet1
  no ip address
  channel-group 1
!
interface POS0
  no ip address
  crc 32
pos flag c2 1
!
interface POS0.1
  encapsulation dot1Q 1 native
  bridge-group 1
!
interface POS0.2
  encapsulation dot1Q 2
  bridge-group 2
!

```

Monitoring and Verifying EtherChannel and POS

After FEC, GEC, or POS is configured, you can monitor its status using the **show interfaces port-channel** command.

Example 10-7: show interfaces port-channel Command

```

Router# show int port-channel 1
Port-channel1 is up, line protocol is up
  Hardware is FEChannel, address is 0005.9a39.6634 (bia 0000.0000.0000)
  MTU 1500 bytes, BW 200000 Kbit, DLY 100 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Unknown duplex, Unknown Speed
  ARP type: ARPA, ARP Timeout 04:00:00
  No. of active members in this channel: 2
    Member 0 : FastEthernet0 , Full-duplex, Auto Speed
    Member 1 : FastEthernet1 , Full-duplex, Auto Speed

```

```
Last input 00:00:01, output 00:00:23, output hang never
Last clearing of "show interface" counters never
Input queue: 0/150/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue :0/80 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  820 packets input, 59968 bytes
    Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
    0 watchdog, 0 multicast
    0 input packets with dribble condition detected
  32 packets output, 11264 bytes, 0 underruns
    0 output errors, 0 collisions, 0 interface resets
    0 babbles, 0 late collision, 0 deferred
    0 lost carrier, 0 no carrier
    0 output buffer failures, 0 output buffers swapped out.
```

Understanding Link Aggregation Control Protocol

In Software Release 8.0.0 and later, ML100T-12, ML1000-2, ML100T-8, and CE-100T-8 cards can utilize the link aggregation control protocol (LACP) to govern reciprocal peer packet transmission with respect to LACP's detection of flawed packets. The cards' ports transport a signal transparently (that is, without intervention or termination). However, this transparent packet handling is done only if the LACP is not configured for the ML series card.

Passive Mode and Active Mode

Passive or active modes are configured for a port and they differ in how they direct a card to transmit packets: In passive mode, the LACP resident on the node transmits packets only after it receives reciprocal valid packets from the peer node. In active mode, a node transmits packets irrespective of the LACP capability of its peer.

LACP Functions

LACP performs the following functions in the system:

- Maintains configuration information in order to control aggregation
- Exchanges configuration information with other peer devices
- Attaches or detaches ports from the link aggregation group based on the exchanged configuration information
- Enables data flow when both sides of the aggregation group are synchronized

In addition, LACP provides the following benefits:

- Logical aggregation of bandwidth
- Load balancing
- Fault tolerance

LACP Parameters

LACP utilizes the following parameters to control aggregation:

System Identifier-A unique identification assigned to each system. It is the concatenation of the system priority and a globally administered individual MAC address.

Example 10-7: show interfaces port-channel Command

Port Identification-A unique identifier for each physical port in the system. It is the concatenation of the port priority and the port number.

Port Capability Identification-An integer, called a key, that identifies one port's capability to aggregate with another port. There are two types of key: administrative and operational. An administrative key is configured by the network administrator, and an operational key is assigned by LACP to a port based on its aggregation capability.

Aggregation Identifier-A unique integer that is assigned to each aggregator and is used for identification within the system.


LACP Usage Scenarios

In Software Release 8.0.0 and later, LACP functions on ML-Series cards in termination mode and on the CE-Series cards in transparent mode.

Termination Mode

In termination mode, the link aggregation bundle terminates or originates at the ML card. To operate in this mode, LACP should be configured on the Ethernet interface. One protect SONET or SDH circuit can carry the aggregated Ethernet traffic of the bundle. The advantage of termination mode over transparent mode is that the network bandwidth is not wasted. However, the disadvantage is that there is no card protection between the CPE and UNI (ONS 15454) because all the links in the ML card bundle belong to the same card.


Figure 10-4: LACP Termination Mode Example

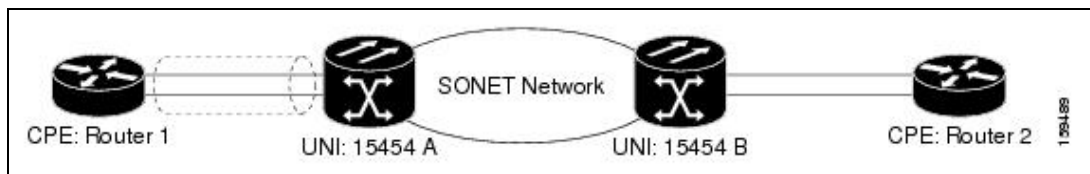

Transparent Mode

In [Figure 10-5](#), the link aggregation bundle originates at router 1 and terminates at router 2. Transparent mode is enabled when the LACP packets are transmitted without any processing on a card. While functioning in this mode, the CE-100T-8 cards pass through LACP packets transparently so that the two CPE devices perform the link aggregation. To operate in this mode, no LACP configuration is required on the CE-100T-8 cards.

Figure 10-5: LACP Transparent Mode Example

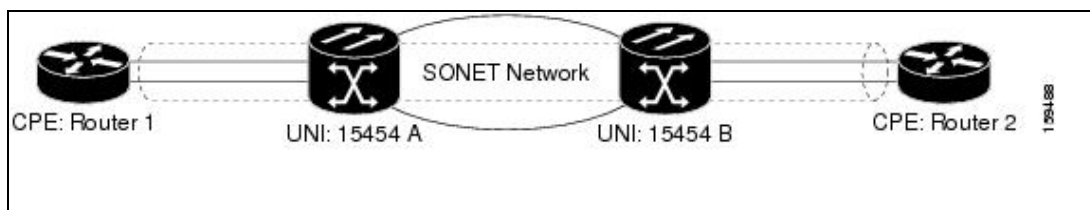

Configuring LACP

To configure LACP over the EtherChannel or POS channel, perform the following procedure, beginning in global configuration mode:

Step	Command	Purpose
1	Router(config)# int port <i>interface-number</i> >	Accesses the port interface where you will create the LACP.
2	Router(config-if)# int fa <i>facility-number</i> >	Access the facility number on the port.
3	Router(config-if)# channel	Accesses the channel group of commands.
4	Router(config-if)# channel-group <i>channel-number</i> > mode ?	Queries the current mode of the channel group. Options include active and passive.
5	Router(config-if)# channel-group <i>channel-number</i> > mode active	Places the channel group in active mode.
6	Router(config-if)# exit	Exits the channel group configuration.
7	Router(config-if)# int fa <i>facility-number</i> >	Accesses the facility.
8	Router(config-if)# lacp-port	Access the link aggregation control protocol commands for the port.
9	Router(config-if)# lacp port-priority <i>priority number</i> >	Sets the LACP port's priority. Range of values is from 1 through 65535. For example, lacp port-priority 100
10	Router(config-if)# exit	Exits the port's configuration mode.
11	Router(config)#lacp sys	Accesses the system LACP settings.
12	Router(config)#lacp system-priority system <i>priority</i> >	Sets the LACP system priority in a range of values from 1 through 65535. For example, lacp system-priority 100
13	Router(config)# exit	Exits the global configuration mode.
14	Router# copy running-config startup-config	(Optional) Saves the configuration changes to NVRAM.

In [Example 10-8](#), the topology includes two nodes with a GEC or FEC transport between them. This example shows one GEC interface on Node 1. (Up to four similar types of links per bundle are supported.)

Example 10-8: LACP Configuration Example

```
ML2-Node1#sh run int gi0
Building configuration...
Current configuration : 150 bytes
!
interface GigabitEthernet0
no ip address
no keepalive
duplex auto
speed auto
negotiation auto
channel-group 1 mode active
no cdp enable
end
ML2-Node1#
ML2-Node1#sh run int por1
Building configuration...

Current configuration : 144 bytes
!
interface Port-channell
no ip address
```

ONS_15454_and_ONS_15454_SDH_Ethernet_Configuration_Guide_R8.5.1_--_Configuring_Link_Aggregation

```
no negotiation auto
service instance 30 ethernet1
 encapsulation dot1q 301

 bridge-domain 30
!
end
ML2-Node1#
ML2-Node1#sh lacp int
Flags:  S - Device is requesting Slow LACPDUs
        F - Device is requesting Fast LACPDUs
        A - Device is in Active mode          P - Device is in Passive mode
Channel group 1

```

Port	Flags	State	LACP port Priority	Admin Key	Oper Key	Port Number	Port State
Gi0	SA	bndl	32768	0x1	0x1	0x5	0x3D

```
ML2-Node1#
Configuration remains same for the ML2-Node2 also.
```

1. This is optional, required only when the IEEE 802.1q configuration is needed.